CUCKOO

CUCKOO

BESPOKE

Massage Lounger

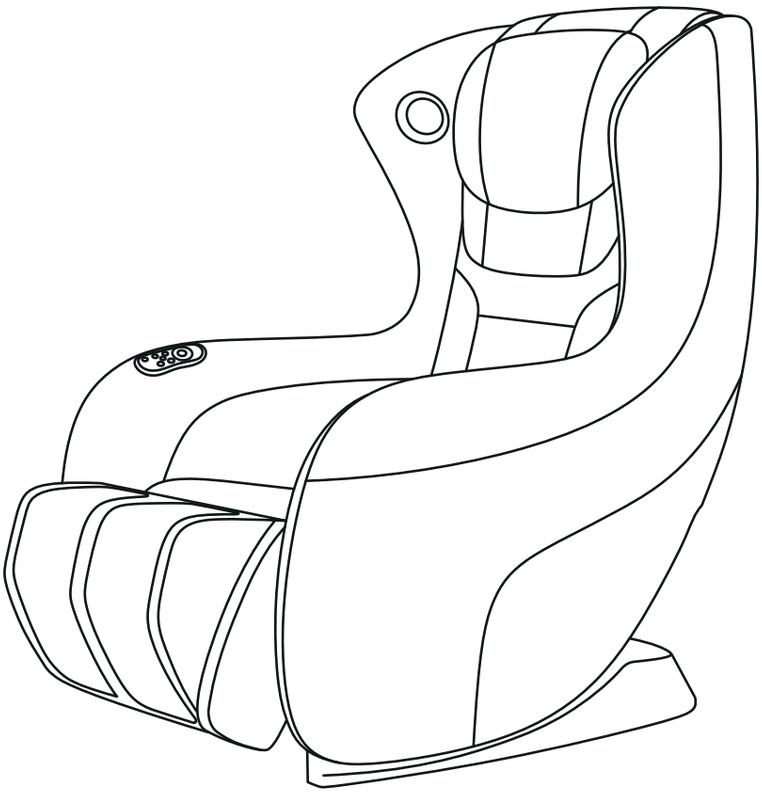

User Manual

CMC-OS3161P 使用手册

Rev. 1.0

CUCKOO

BESPOKE

Massage Lounger

User Manual

All information is correct at the time of print

Before Use

- **Important safety instructions** EN1
- Grounding instructions EN5
- Product parts EN6
- Setup of the massage lounger EN8
- Before use EN9

How to Use

- Operation Instruction EN12
- After massage EN15

Maintenance

- Cleaning and maintenance EN16

Q&A/Important notes

- Q&A EN17
- Troubleshooting EN18
- Specification EN20
- Contact Us EN21

Important safety instructions Must be followed

These safety instructions must be strictly followed in use to avoid personal injuries and property damage.

■ **All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.**

⚠ **Warning**	**Actions that can cause serious injuries or death**
⚠ **Caution**	**Actions that can cause minor injuries or property damage**

■ **Pay attention to the symbols before safety instructions (see below).**

Actions that are absolutely forbidden	**Actions that must be done**

⚠ Warning

Must be followed

- **Before using the product, persons who are being treated or have any of the following symptoms should consult a physician.**
  (1) Persons with a pacemaker or another in-vivo electronic medical device susceptible to electronic jamming;
  (2) Patients with malignant tumors;
  (3) Patients with heart disease;
  (4) Persons proved to be unable to identify temperatures;
  (5) Pregnant persons or women who have just had childbirth;
  (6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation disturbance;
  (7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;
  (8) Persons with injuries in the massaged parts;
  (9) Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);
  (10) Persons who are unwell or must have a rest;
  (11) Persons with an abnormal or bent vertebra;
  (12) Persons with protrusion of intervertebral disc;
  (13) Persons who feel very uncomfortable (except for the circumstances above)

  Otherwise accidents or physical discomfort may happen.

- **If you feel physically abnormal while using or no effect after use, stop the product immediately and consult a physician about it.**
  Otherwise accidents or physical discomfort may happen.

- **Before being massaged or moving the backrest or the Lower Leg/Foot massage section, make sure there is no person or pet close to the product (in front, behind, below or on the side).**
- **Before use, make sure there is no foreign matter between the backrest and the back cover.**
  Otherwise accidents or physical discomfort may happen.

- **Before use, lift the back cushion and check whether fabric of moving sections of the massage wheels or of other positions are damaged.**
  (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product for repairs.)
  If the product is used when the fabric is damaged, you may get injured or get an electric shock.

- **Do not massage for more than 30 minutes each time.**
- **Do not massage a single part for more than 5 minutes.**
  If any of these safety instructions is not followed, you may suffer an adverse effect and be injured.

- **After use each time, turn the power switch to the "O" position ,and then pull out the power plug.**
  Otherwise accidents or injuries may happen.

- **Follow the regulations about use of the socket and the wiring devices.**
- **Use a 220-240V~,50/60Hz power supply.**
  (Do not use the product in a foreign country or connect it with a transformer without consulting an expert.) Otherwise electric shocks, product faults or fires due to overheating may happen.

- **Insert the power plug thoroughly into the socket.**
  Otherwise electric shocks or fires may happen.

- **Remove remove dirt or dust from on the power plug at regular intervals.**
  Otherwise fires caused by poor insulation may happen. (Wipe the power plug with dry cloth.)

⚠ Warning

Must be followed	● **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid smoke, fires or electric shocks.** Abnormality and fault examples • The product fails to work after the power switch is turned to the ON position; • When the power line is moved, the product Keep turning off and on; • In use, the product gives off a burning smell or an abnormal sound; • The product is deformed or abnormally heating; → In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.
Forbidden	● **Do not put the back cushion between the backrest and the back cover.** Otherwise product faults may happen.
	● **When handling the product, hold its frame.** Otherwise product faults or personal injuries may happen.
	● **The following persons should not use the product.** **Persons for whom massage is forbidden by doctors, such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections.** Otherwise diseases may get worse.
	● **The following persons should not massage their waists.** **• Persons with acute lumbago, protrusion of intervertebral disc, or displacement of a lumbar vertebra;** **• Persons with deformation or other discomfort of the hip joint;** Otherwise diseases may get worse.
	● **Do not put hands, arms or feet into the backrest's fabrics of moving sections of the massage wheels.** ● **Children should not use the product. Keep them from playing on the product or climbing onto the Lower Leg/Foot massage section, the seat, the backrest or the armrests.** ● **Do not climb onto the backrest or the armrests.** ● **Do not lean or sit on the backrest.** ● **Keep your head from reachable areas of the backrest and the back cover.** ● **Persons unable to express themselves clearly or unable to operate the product should not use the product.** ● **When massaging the neck, pay attention to moving directions of the massage wheels and do not massage with a too large force or massage front part of the neck.** Otherwise accidents or personal injuries may happen.
	● **Do not damage the power line or the power plug.** **(Do not damage, machine, forcedly bend, twist or extend the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.)** A damaged power line or power plug may result in electric shocks, short circuit faults or fires. Please consult the shop from which you bought the product or a designated authorized service center about maintenance method of the power line or the power plug.
Wet-hand operation forbidden	● **Do not insert or pull out the power plug with wet hands.** Otherwise electric shocks may happen.
Disassembly forbidden	● **Do not refit, disassemble or repair the product replace with yourself .** Otherwise fires, abnormal movements or personal injuries may happen.

⚠ Caution

Must be followed	● **The following persons (even if they are physically healthy at present) should consult a physician before using the product.** **(1) Persons with muscular atrophy due to aging or thin persons;** **(2) Persons feeling lumbago because of bone or viscus problems;** **(3) Persons tending to suffer sprains or bruising;** **(4) Persons with carsickness or seasickness or strong response when taking other transport means;** **(5) Persons who once received a heart operation or another visceral operation;** Otherwise health may get worse.
	● **Before sitting on the product, make sure there is no foreign matter between any two parts of it.** **(Make sure there is no foreign matter on the back cover, the backrest, the seat surface, the Lower Leg/Foot massage section or inside surface of the back cushion.)** Otherwise accidents, injuries, or product faults caused by clamping of hands, feet, or other articles by the product may happen.
	● **Do not use the product when wearing any hard decorative article on head (such as hair pin).** ● **If there is any hard article (such as mobile phone or key) in a pocket of the trousers, take it out before massage.**
	● **Before sitting on the seat, make sure the massage wheels are in the retracting positions.** ● **If you want to leave the seat during the massage, stop the product first.** Otherwise accidents or injuries may happen.
	● **When pulling out the power plug, do not pull the power line but hold the power plug.** Otherwise an electric shock or a short circuit fault may happen.
	● **Before moving the product, make the Lower Leg/Foot massage section back to the original position by adjusting its angle.** Otherwise injuries may happen.
	● **When moving the product by pulleys, put articles such as mats on the floor.** Otherwise marks may be left on the floor.
	● **Before moving the product by pulleys, remove the obstructions close to it. Lift the seat surface of the Lower Leg/Foot massage section to a position a little lower than the waist and move the product slowly.** Otherwise accidents or injuries may happen .
	● **In use, place the product horizontally.** Otherwise accidents may happen.
	● **If any symptom such as skin inflammation, itching or swelling occurs during use, stop the product immediately and consult a physician.** Otherwise accidents or physical discomfort may happen.
	● **If the product is used again for massage after a period of out-of-service, read the Operating Instructions again and make sure the product can run normally first.** Otherwise accidents or injuries may happen.
Forbidden	● **Do not use the product and other devices at the same time.** Otherwise accidents or physical discomfort may happen.
	● **Keep head, abdomen or skin from the massage wheels and do not put hands or feet between the massage wheels.** ● **Do not put the knees between the Lower Leg/Foot massage section.** ● **Do not fall asleep while using the product. Do not use the product after drinking.** ● **If air in the air bag on the seat is not completely discharged, do not stand or jump on the seat or put things on it.** Otherwise accidents or injuries may happen.

⚠ Caution

Forbidden	● **Do not put hands or feet between the product and the Lower Leg/Foot massage section.** ● **Do not put hands, arms, or head into the seam of the Lower Leg/Foot massage section (footrest).** **For safety, reset the Lower Leg/Foot massage section after massage.** ● **Do not put hands, feet or head between the backrest and the back cover.** ● **Do not put pets on the product (such as its back cover, backrest or armrest).** ● **Do not pull out the power plug or turn OFF the power switch suddenly during massage.** Otherwise injuries may happen.
	● **Do not stand or sit on the back cover.** Otherwise personal injuries due to the product toppling may occur.
	● **Do not stand or sit on the armrests.** Otherwise personal injuries may happen.
	● **Do not stand or sit on the Lower Leg/Foot massage section or the footrest.** Otherwise accidents or injuries due to rotation of front of the footrest or turnover of the product may happen. If bottom of the Lower Leg/Foot massage section runs into the floor, the floor may be damaged.
	● **Do not drag or push the product after it is installed.** Otherwise the floor may be damaged.
	● **Do not move the product while there is a person on it.** Otherwise, accidents, or injuries may happen due to a toppling of the product.
	● **Do not use the product on heating devices such as electric blankets.** Otherwise fires may happen.
Wet-hand contact forbidden	● **Do not use the product in a bathroom or another wet place.** Otherwise electric shocks or product faults may happen.
Product wetting forbidden	● **Do not sprinkle substances such as water on the product or its remote controller.** Otherwise electric shocks, short circuit, or product faults may happen.
Pull out the power plug	● **Before cleaning or maintaining the product, pull out the power plug first.** Otherwise electric shocks or injuries may happen.
	● **In the case of a power failure, pull out the power plug at once.** Otherwise accidents or injuries may happen when power is restored.
	● **When the product is not used, pull out the power plug.** Otherwise electrical fires may happen.

Warning:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

Grounding instructions

- The product must be grounded to reduce the electric shock hazard because of functional faults of the product.
- The product has a power line with a grounding conductor and a grounding plug. The grounding plug must be inserted into an appropriate socket that has been correctly installed and grounded in full compliance with the local code and decree.

⚠ Caution

- If the grounding conductor is not correctly connected, electric shocks may happen. If you are not sure about correctness of the grounding, have it inspected by a professional electrician. Even if the grounding plug provided with the product does not match with the socket you have, do not refit it by yourself but ask a professional electrician to install an appropriate socket.
- The product has a grounding plug. Make sure the product is connected with a socket matching with shape of the grounding plug.
- Do not connect the product to a multi-plug.
- If the power plug is damage,it must be replaced by a special plug available from authorised agents.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance has a heated surface. Persons sensitive to heat must be careful when using the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

1. The appliance is to be supplied through a residual current device (RCD) having a ratedresidual operating current not exceeding 30 mA.
2. This appliance is considered to be suitable for use in countries having a tropical climate. It may also be used in other countries.



Product Parts

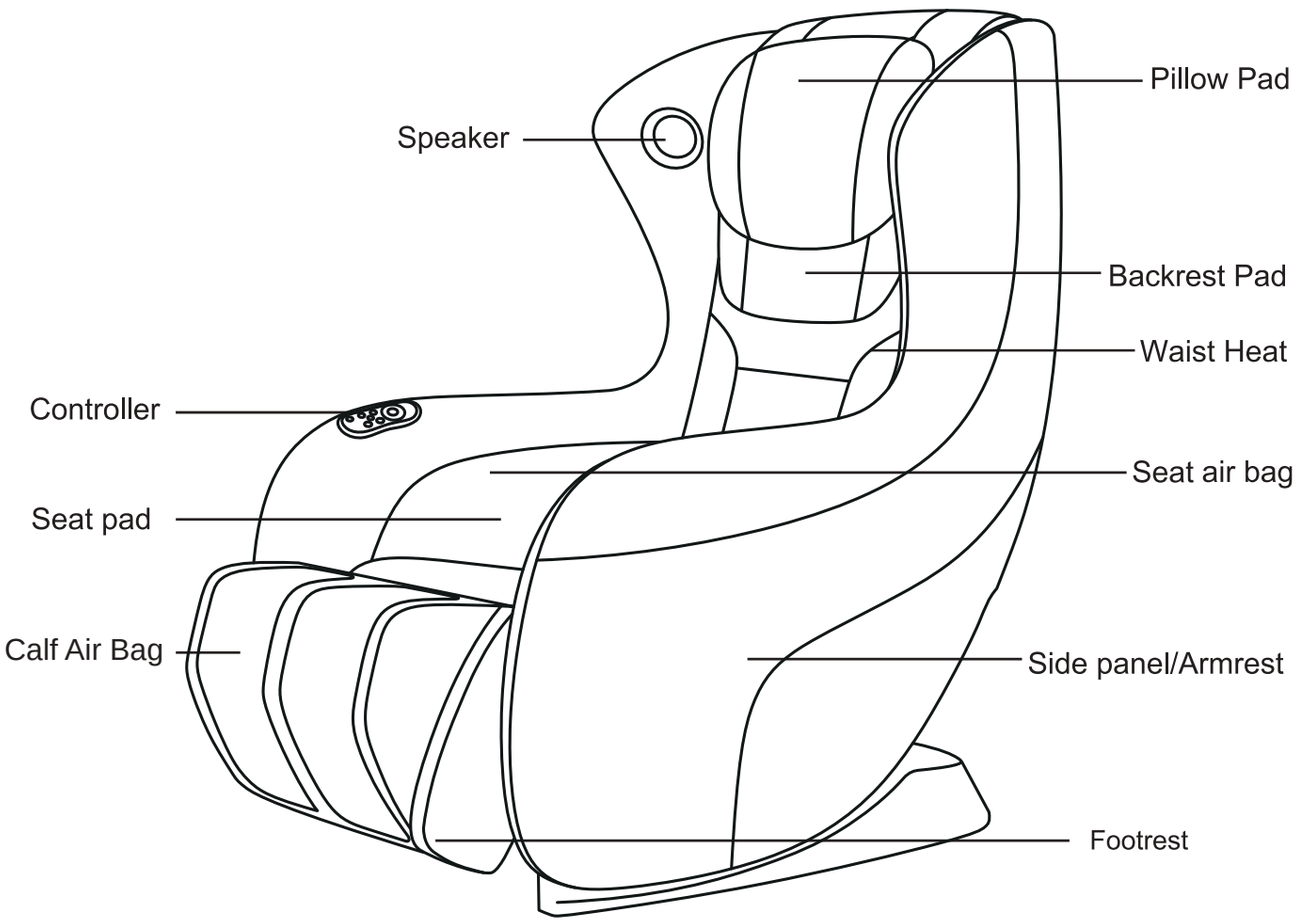

Product Parts

Air Bags Massage Position

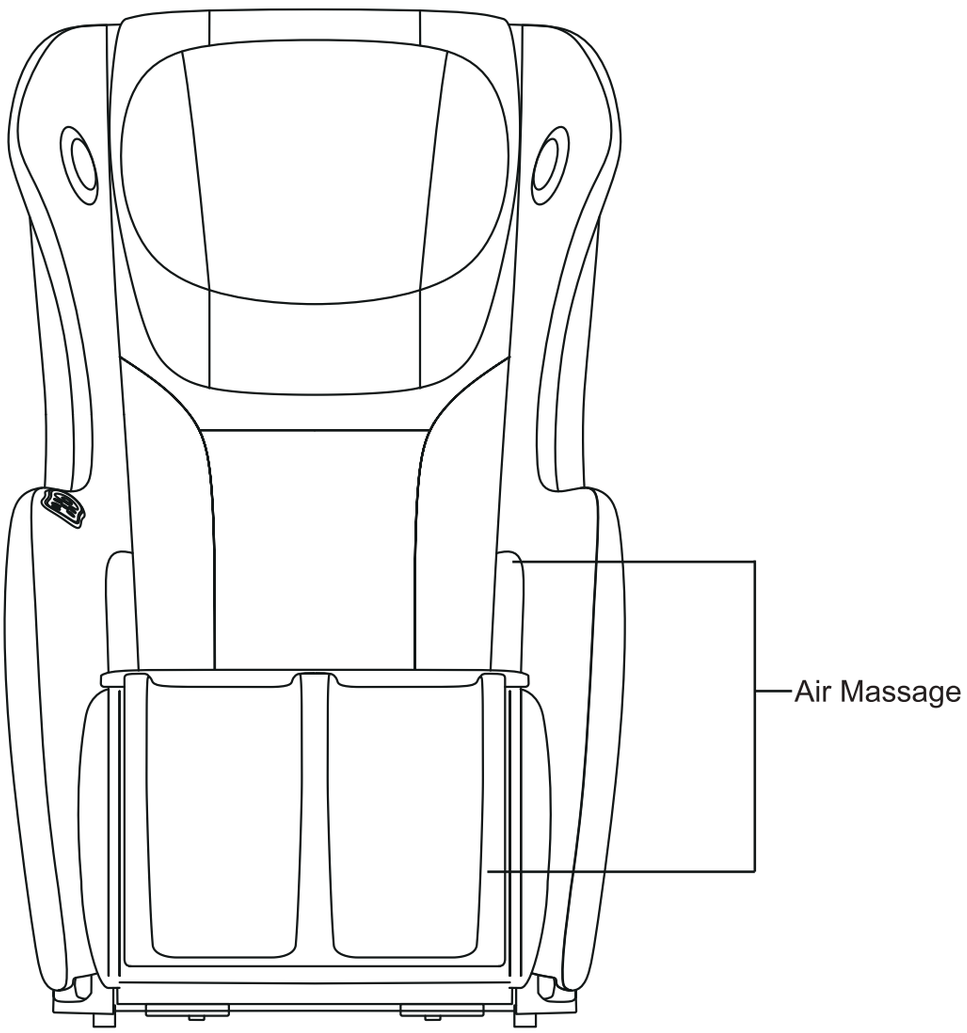

Setup of the massage lounger

1 Before use (installation position)

●Make sure there is enough space for the tilting of the product.

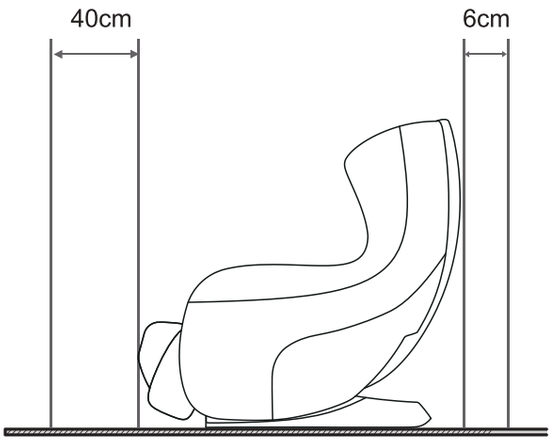

- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: 150X80cm). As shown in the figure.
- Install the product close to a power socket.

2 Description of product movement

Recline the chair to easily move the chiar around the house.

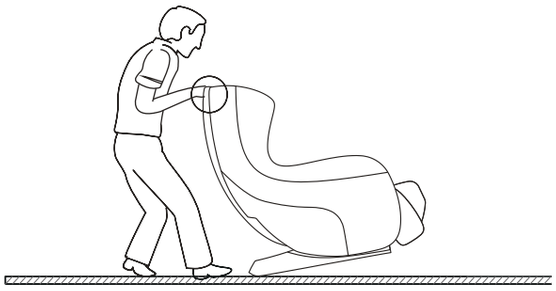

※**Caution**

- **Before moving the chair,please put the footrest back into the original positon. Otherwise, injuries might occur in the process of moving.**
- **Avoid moving the massage lounger when there is someone seated on it.**
- **Placing a mat underneath the massage chair is advisable,as the moving process might leave scratches on the floor surface.**

●The product is heavy and be careful when moving.

Product weight	Approx. 51.5kg

Put the product on the floor.

- ●Put down the product slowly and carefully to avoid foot injury.
- ●Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- ●It is suggested to place an article such as a mat on the floor to keep it from damage.

⚠ Caution

- **Do not drag or pull the product after it is installed.**
- **When handling the product, do not hold its frame.**
  Otherwise product faults or personal injuries may happen.
- **Do not move the product by pulleys directly on a floor.**
  Otherwise scratch may be left on the floor.
- **Do not move the product while there is a person on it.**
  Otherwise, accidents or injuries may happen due to falling down.
- **Do not hold the foot massage section when moving the product.**
  Otherwise injuries may happen due to sliding.

Before use

1 Check the space around the product.

Make sure there is no people, pet or other object close to the product.

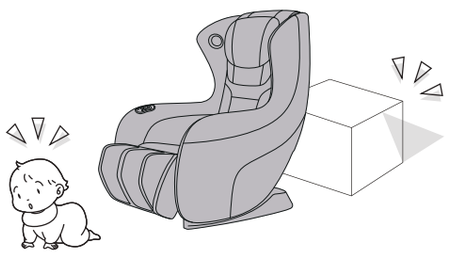

2 Roll up the back cushion and fix it by the zipper.

Roll up the back cushion and fix it the zipper.

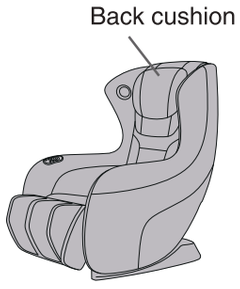

3 Make sure there is no foreign in the gap of the machine

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.

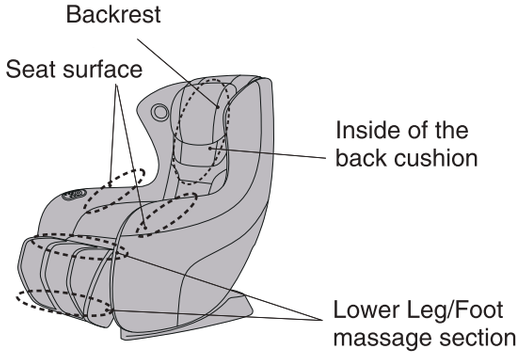

⚠ Caution

- **Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.**
- **Before sitting on the product, make sure there is no foreign matter between any two parts of it.**
- **Do not put pets on the product (such as its back cover, backrest).**

4 Inspect the power line and power plug

⚠ Warning

- **Remove dirt and dust from the power plug at regular intervals.**
  Otherwise fires caused by poor insulation may happen. (Wipe the power plug with dry cloth.)

- **Do not damage the power line or the power plug. Do not damage, machine, forcedly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.**
  A damaged power line or power plug may result in electric shocks, short circuits, or fires.
  Please consult the shop you bought the product or an authorised service center about maintenance method of the power line or the power plug.

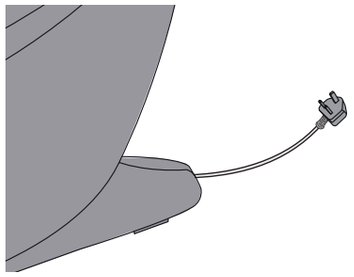

Be aware of the power line at all

Push the interface into the power input jack till the end.

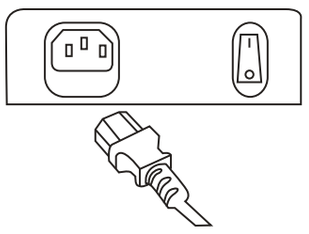

5 Power on the product

1 Insert the power plug into the power socket.

2 Pull the power switch to the “I” position.

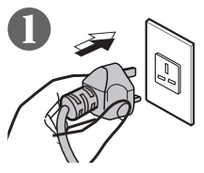

⚠ Warning

- **Insert the power plug into the power socket till the end.**
  Otherwise electric shocks or fires may happen.

- **Abide by the regulations on use of the socket and the wiring devices strictly.**
- **Use a 220-240V~,50/60Hz power supply. (Do not use the product in a foreign country or connect it with a transformer without proper consultation.)**
  Otherwise electric shocks, product faults or fires may happen.

- **Do not insert or pull out the power plug with wet hands.**
  Otherwise an electric shock may happen.

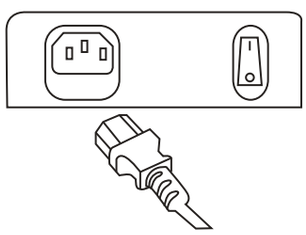

6 Make sure the massage wheels are retracted

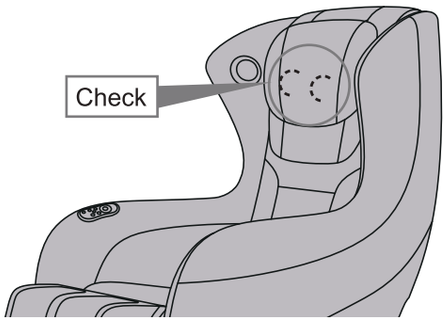

If they are not,

Pressing ON will return them to the retracting position.

7 Make sure the fabric is not damaged nor cracked

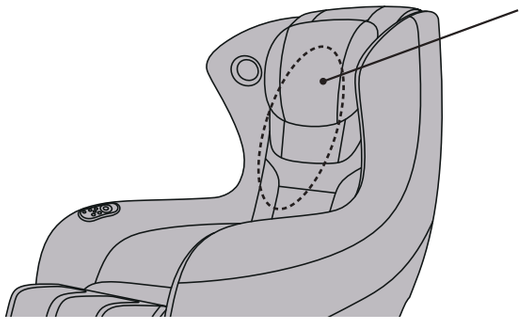

Inspected area:
The fabric of traveling sections of the massage wheels on the backrest

⚠ Warning

- **Before use, check whether fabrics of the area pointed out in the figure are damaged.**
  (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)
  If the product is used when there is fabric damage, you may get injured or get an electric shock.

Operation Instruction

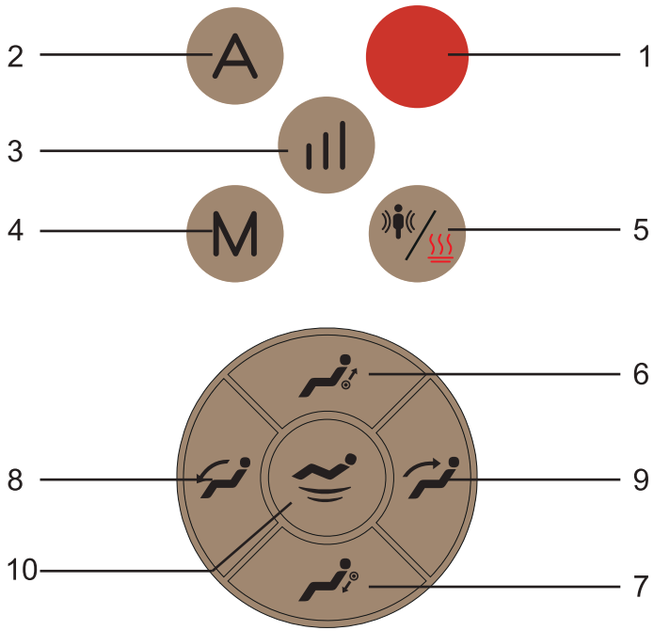

1. ON/OFF

The Power On control button
Press the ON/OFF button to switch on the massage chair. Press again to stop all the massage function and return the massage chair back to origin position.

2. Auto Program

Press this button to activate 6 different program funtions. Each time the button is pressed, the program will change in the following sequence: Deep Tissue > Relax > Lower Body > Upper Body > Lumbar Care > Shoulder Massage. Each time the auto button is pressed, the chair will automatically perform a shoulder height scanning. User can manually fine tune the roller to their desired position.

Red dots will light up on the controller according to massage technique selected:

Press 1 Time	Deep Tissue	● ○ ○
Press 2 Times	Relax	○ ● ○
Press 3 Times	Lower Body	○ ○ ●
Press 4 Times	Upper Body	● ○ ●
Press 5 Times	Lumbar Care	○ ● ●
Press 6 Times	Shoulder Massage	● ● ●

3. Roller Speed / Strength / Air Intensity

Press this button to increase the massage strength. 3 levels of massage strength are available.
LV1 > LV2> LV3.

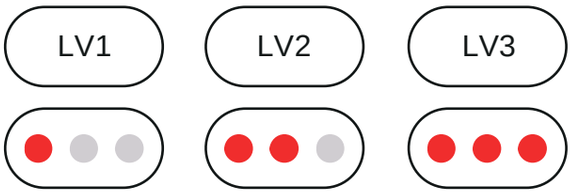

4. Manual

Press this button to activate manual massage. The sequence is from Kneading> Tapping> Clapping + Kneading> Shiatsu> Clapping> Rolling> OFF

5. Air Pressure Massage

Press this button to activate air pressure massage. Press again to turn OFF.
*Heater *
Press and hold for 3 second, to activate waist heater. To tun OFF, repeat the similar process.

6/7. Upward / Downward

Press and hold this button to move the massage roller.

8/9. Ascend / Descend

Press and hold this button to move the massage angle.

10. Zero G

Press this butto to activate Zero G function. Total 2 angel of Zero G is available ZG1> ZG2> Origin.
Swing Mode
Press and hold for 3 second to activate swing function . To turn OFF, repeat the similar process.

USB Charging

Power on the chair. Plug in your mobile device via USB to charge.

Footrest Flipping

Press down on the sofa calf and flipping it until it clicks,the calf massage function can be achieved.Press down on the calf again to flip it over until it clicks,then to activate sofa,lounge chair or ottoman.

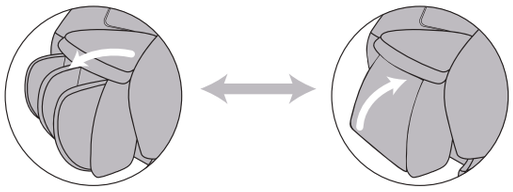

Music Function

Play Music via Mobile Device: Turn on Bluetooth of mobile device, then select Bluetooth device of massage chair (CMC-OS3161P-XXXX) to pair connection successfully.
The password for Bluetooth connection is “9999”

After massage

Power off the product.

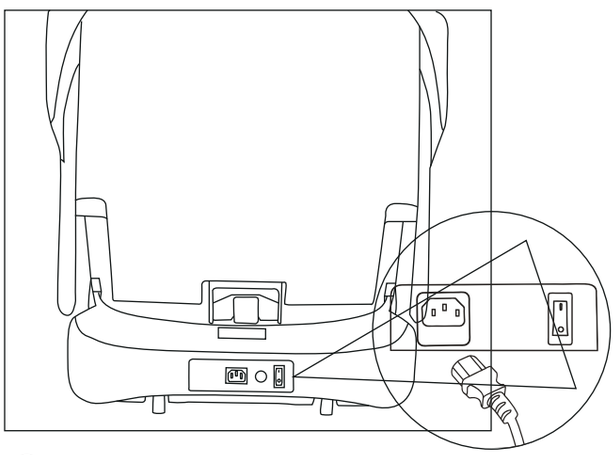

①Turn off the power switch.

②Pull out the power plug.

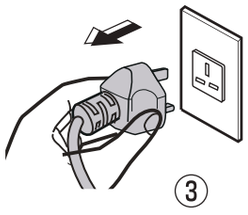

⚠ Warning

- **After use each time, pull the power switch to the"O"position and pull out the power plug;** otherwise accidents and injuries.

Massage will end automatically when time is up.

- The Lower Leg/Foot massage section will remain at the final position.
- The massage wheels will move to the retracting positions.
- The backrest will not raise automatically. If controller was shut off, press ON/OFF button, the backrest and footrest will reset.

Cleaning and maintenance

Wipe the leather with a soft dry cloth.

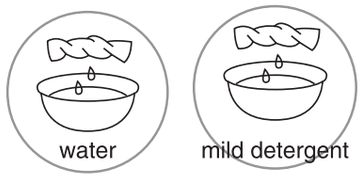

- **Do not clean the product with chemicals such as thinners, gasoline or alcohol.**
- **When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.**
- **If the leather is very dirty, wipe it with the method below.**
  - ①Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
  - ②Wipe surface of the leather with the soft cloth.
  - ③Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
  - ④Wipe with a piece of wrung soft cloth.
  - ⑤Let the leather naturally air dry.

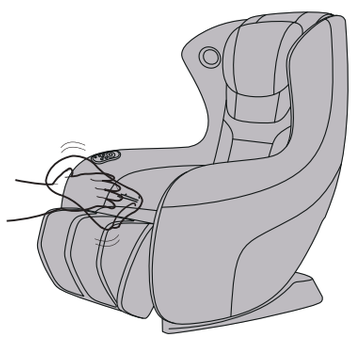

- **If it is difficult to remove the stains on the leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.**
- **Do not dry the surface with a hair drier.**
- **Surface of the leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.**
- **Keep from long-time contact with plastics to avoid fading.**
- **Leather may discolor, so the position in contact with the hair dye used should be covered by a towel.**



1 Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**

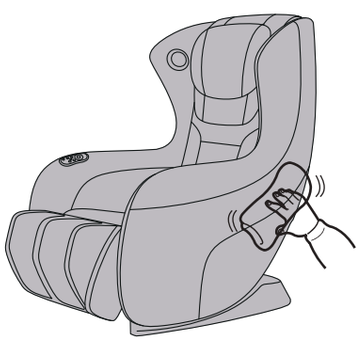



2 Wipe with a piece of cloth once soaked in clean water and wrung out.

- Wring the cloth out before using it to wipe the remote controller.



3 Let the plastic part naturally air dry



Questions and answers (Q&A)

Q Can persons paying frequent visits to hospitals because of diseases use the product?

A These persons should consult physicians before using the product.

He device uses "touch-pressure stimulation":
Muscles are compressed to relieve their tension and promote hemokinesis. Some diseases may get worsened because of massage. Thus, consult the attending doctors before using the product.

Q Are there any things needing special attention during moving?

A Pay attention to the following things during moving.

Turn off the power switch and pull out the power plug.

- If the original packing box is unavailable, make sure the power line is not wound on the product, wind it and place it on the seat surface. When handling the product, keep the power line from falling off and rubbing with the ground.
- If the original packing box is unavailable, properly keep other packing auxiliary materials and wrap the product with them to avoid scratches and vibrations during handling.

Q Where is the serial number of the product?

A It is on the back of the main body.

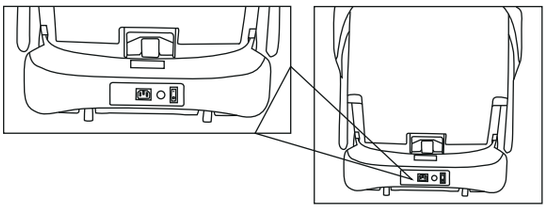

Q I care about the sounds the product makes when being used.

A It is caused by the core structure.

Q Why do the massage wheels have different massage intensities?

A This phenomenon possibly exists during massage because of the core structure.

To simulate the most natural massage effect, the product is designed with a core structure allowing alternate back massage by a left massage wheel and a right massage wheel. During massage, the massage wheels possibly have slightly different positions on the back. That's why you have that feeling. It is not a defect. The product is wroking as intended.

Q How about monthly power consumption of the product?

A Supposing you massage for 30 minutes in twice (15 minutes each time) a day, about 1.0 kilowatt-hours will be consumed each month.

Troubleshooting

After a fault happens, inspect and try the corresponding method below.
If the fault still exists after that, contact the shop from which you bought the product.

Fault	Cause and elimination method
	For safety, the massage wheels will possibly stop upon a too large external force during use. If all marks and buttons on the remote controller begin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later. If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 100 kilograms, should follow relevant precautions.)
	For safety, the product will stop upon an obstruction or a too large force. If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.
	If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.
	It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.
	● The power line is disconnected. ● The power switch is not turned on. ● No program is selected after ON button on the remote controller is pressed.
	To avoid accidents,contact an authorised service center.
	● The heating button is set to be OFF. ● Only fabrics in the tiptoe positions are warm. The warm feeling depends on factors such as body type, massage method, clothes and room temperature. When the foot massage section is being raised, the warm transfer part is in close contact with the foot make you feel warm. You may cover your foot with a blanket to get warmer. **For safety, the product will stop upon an obstruction or a too large force.** If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.
	● Due to the heater structure, the product will still feel warn shortly after heating because of the residual heat. ● If a single part is continually massaged even after the heating function is disabled, you will feel increasingly warmer. **For safety, the product will stop upon an obstruction or a too large force.** If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.

If above solutions still do not solve your issue(s) ,kindly contact an authorised service Center.

The following sounds and noises will occur during regular use. They indicate that the product is functioning normally.

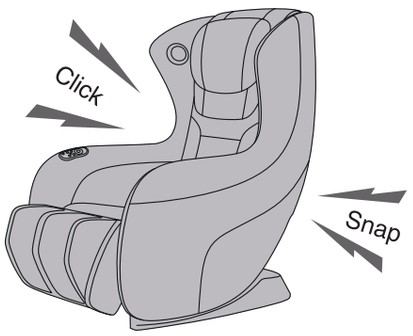

- Sound when the stretching massages are retracted
- Sound when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

If the sound is unusually loud, it is also possible that the product has failed.

- In this case, have the product inspected and repaired by an authorised service center.

⚠ Warning

- **Do not refit, disassemble or repair the product yourself without consultation or supervision.**
  Otherwise fires, abnormal movements or personal injuries may happen.

⚠ Warning

- **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.**
  < Abnormality and fault examples>
  • The product fails to work after the power switch is turned to the ON position;
  • After the power line is moved, the product is discontinuously powered on;
  • In use, the product gives off a burning smell or an abnormal sound;
  • The product is deformed or abnormally heating
  → In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.

Specifications

	AC 220-240V~, 50-60Hz
	100W
	Approx. 93.5cm
	Massage wheel spacing (including massage wheel width) during use of the product Massage wheel spacing (including massage wheel width) during rolling on the back and up-down moving: Approx. 5 cm ～20cm
	Kneading: Approx. 26 times/min. ~ approx. 36 times/min. Beat: Approx. 200 times/min. ~ approx. 260 times/min. (single side) Moving speed: Approx. 3.1 cm/s ~ approx. 4.3 cm/s
	Backrest: Approx. 98°~120° Footrest : Approx. 110°~174°
	Approx. 15 minutes (automatic power-off)
	Approx. 120cm*65cm*106cm
	Approx. 140cm*65cm*84cm
	Approx. 51.5kg
	Approx. : 147.5cm*69cm*84cm
	Approx: 61.5kg
	100kg

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.

Contact Us

CUCKOO International (MAL) Berhad

L16, Menara Bangkok Bank, Laman Sentral Berjaya,
No.105, Jalan Ampang,50450 Kuala Lumpur, Malaysia

Careline : 1-800-88-8181

www.cuckoo.com.my

CUCKOO

BESPOKE

Massage Lounger

User Manual

All information is correct at the time of print

使用前

- 重要的安全事項 SC1
- 接地說明 SC5
- 產品結構 SC6
- 設置按摩椅 SC8
- 使用前 SC9

使用方法

- 操作指南 SC12
- 按摩結束 SC15

維護

- 清洗及保養 SC16

Q&A/重要事項

- Q&A SC17
- 故障檢修 SC18
- 規格 SC20
- 聯繫我們 SC21

重要的安全事項 必須遵守

下文列舉的是使用中為防止人身、財產損害而必須嚴格遵守的安全事項。

■ **所有安全事項將根據因錯誤使用而導致危害或損害的程度，予以說明。**

⚠警告	**可能造成重傷或死亡後果的事項內容。**
⚠注意	**可能造成輕傷或財產損害的事項內容。**

■ **請注意各安全事項前的符號。（下文為符號範例）**

絕對禁止事項。	**必須執行事項。**

⚠警告

必須遵守

● **正在接受治療或有下列症狀的人，在使用本機前，應諮詢醫師。**

（1）佩戴起搏器或其他易受電子幹擾的體內植入型電子醫療器械的人
（2）惡性腫瘤病人
（3）心臟病人
（4）被查證喪辨別溫度能力的人
（5）孕婦或剛完成分娩的人
（6）因糖尿病等高度末梢迴圈障礙引起知覺障礙的人
（7）骨質疏鬆症患者、脊柱骨折病人、患有扭傷或肌肉拉傷等急性疼痛性疾病的人
（8）按摩部位受傷的人
（9）體溫在38℃以上（有發熱症狀）的人
（10）必須靜養或身體顯著不適的人
（11）脊柱異常或脊柱彎曲的人
（12）患有椎間盤突出的人
（13）身體感覺特別不適的人

否則可能發事故或造成身體不適。

● **使用中感到身體異常、或使用後覺得沒有效果時，請立即停止使用，並諮詢醫師。**
否則恐發事故或造成身體不適。

● **按摩中或移動靠背、小腿、腳部按摩部時，請事先確認本機周圍（本機後面、下面、前面和側面）沒有人或寵物。**
● **使用前請務必確認靠背和後蓋之間無異物或者寵物。**
否則恐發事故或造成身體不適。

● **在使用本機前，一定要掀開靠墊，以檢查靠背覆蓋在按摩輪活動範圍上的面料是否破損或者其他部位的面料是否破損。**
（無論發現多麼細小的破損，都請立即停止使用，拔掉電源插頭，並將本機報修。）
在面料破損的情況下使用本機，可以引發受傷或觸電的危險。

● **每次按摩請控制在30分鐘內。**
● **請將對身體同一部位的按摩控制在5分鐘內。**
否則可能出現負面效果並造成傷害。

● **每次使用完畢，應將電源開關滑到“O”（關閉）位置，拔掉電源插頭。**
否則可能因兒童頑皮引發事故或造成傷害。

● **請嚴格遵守插座和配線器具的使用規定。**
● **請使用220–240V~，50/60Hz交流電。**
（請勿在國外使用此產品，或擅自連接變壓器。）
否則可能引發觸電、機體故障或因過熱導致火災。

● **請務必將電源插頭插到底，使其確實地插入插座中。**
否則可能引發觸電或因過熱導致火災。

⚠警告

必須遵守	● **請定期清理電源插頭上的灰塵等髒汙。** 否則可能因溫氣等原因引發絕緣不良，從而導致火災。 （請用乾燥的抹布擦拭電源插頭。）
	● **發生異常、故障時，立即停止使用，拔掉電源插頭。（否則可能冒煙、起火或觸電）** （異常、故障事例）。 • 接通電源開關後不可移動　。 • 移動電源線，有時通電有時不通電。 • 運行中發出焦臭味、異常聲響。 • 按摩椅變形或者異常發熱。 →請立即委託授權服務中心檢查和修理。
禁止	● **請勿將靠墊伸入靠背和後蓋之間。** 否則可能會導致機體故障。
	● **請握住邊框進行本機搬送。** 否則可能會導致機體故障或人身傷害。
	● **下列人員請勿使用本機。** **被醫生禁止按摩的人（例：患有血栓症、重度動脈瘤、急性靜脈瘤、各種皮膚炎或皮膚感染症（包括患皮下組織炎症）的人等）** 否則可能會導致病情惡化。
	● **下列人員請勿使用腰部按摩。** • 患有急性腰痛、椎間盤突出症或腰椎移位症的人 • 罹患變形性髖關節症等髖關節不適的人 否則可能會導致病情惡化。
	● **在使用中請勿將手、手臂、腳塞入靠背覆蓋在按摩輪活動範圍上的面料。** ● **兒童禁止使用本機。此外，請勿讓兒童在本機上玩耍，或者爬到小腿●腳部按摩部、座面、靠背或扶手上。** ● **請勿攀爬靠背或者扶手。** ● **請勿倚背或坐在靠背上。** ● **請勿將頭伸入靠背和後蓋之間的活動區域。** ● **請勿讓不能表達自己意思的人或沒有能力操作本機的使用本機。** ● **按摩頸部時，請注意按摩輪的動向，請勿按摩前頸，請避免過重地按摩頸部。** 否則可能會引起事故或造成傷害。
	● **請勿損壞電源線及電源插頭** **（請避免此類行為：損傷、加工、強行彎曲、扭轉、拉長電源線及電源插頭，或將電源線及電源插頭靠近發熱器，或在電源線及電源插頭上系重物、或任意捆綁。）** 使用破損的電源線或電源插頭，可能引起觸電、短路或引發火災，請到購買本品的商店或指定的維修中心諮詢修理電源線或電源插頭的方法。
濕手禁止	● **請勿用沾濕的手插、拔電源插頭。** 否則可能導致觸電事故。
分解禁止	● **請勿擅自改造本機。請勿自行分解或修理本機。** 否則可能導致起火、異常動作、人身傷害。

⚠注意

必須遵守	● **下列人員即使目前身體健康，也請諮詢醫師後再使用本機。** **（1）因年齡增長而導致肌肉萎縮的人或身體纖瘦的人　（2）因骨頭或內臟問題而感覺腰痛的人** **（3）容易扭傷或容易瘀傷的人　（4）暈車、暈船或乘坐其他交通工具時，反應異常激烈的人** **（5）過去曾被施予心臟手術或其它內臟手術的人** 否則可能有損自身健康。
	● **就坐前，請先確認本機各個部件之間沒有異物。** **（確認後蓋、靠背、座面、小腿●腳部按摩部、靠墊內側沒有夾雜異物。）** 否則可能因手、腳或其他物件被本機夾住，而引發事故、造成傷害或機體故障。
	● **頭部佩戴任何硬質飾物（如髮卡等）時請勿使用本機。** ● **當褲子口袋內部有硬物時（如手機、鑰匙等），將其取出，然後按摩。**
	● **就座前，確認按摩輪處在收納位置。** ● **按摩途中若想離開座位，必須先停止按摩椅運作，再離開座位。** 否則可能引發事故或造成傷害。
	● **請勿扯電源線試圖拔出電源插頭，一定要握住插頭本身將其拔出。** 否則可能引發觸電或短路。
	● **移動本機前，必須把小腿●腳部按摩部的角度調節回最初位置。** 否則可能造成傷害。
	● **如果使用滑輪滾動本機，在地板上墊上墊子等。** 否則可能在地板上留下傷痕。
	● **使用滑輪移動本機前，須先清空周圍障礙物。抬起小** ● **腳部按摩部座面到略低於腰的位置，慢慢移動。** 否則可能因機身翻倒引發事故或造成傷害。
	● **須將本機放置在水平面上使用。** 否則可能因機身翻倒引發事故。
	● **因使用本產品而產生出疹、紅腫、發癢等症狀時，請立即停止使用，並諮詢醫師。** 否則可能引發事故或導致身體不適。
	● **閒置一段時間後使用本品，請先重新閱讀一遍產品使用說明書，並確認機體運作正常後，再開始使用。** 否則可能引發事故或造成傷害。
禁止	● **請勿和其他器械同時使用。** 否則可能造成事故或引起身體不適。
	● **請勿將頭部、腹部或皮膚緊貼按摩輪。此外，請勿將手或腳伸入按摩輪之間。** ● **請勿將膝蓋夾在小腿和腳部按摩部之間。** ● **勿在使用本機時入睡。此外，飲酒後請勿使用本機。** ● **當鼓起的座面氣囊裡的空氣沒有被排放完時，不要站在座面上，或者跳上去，或者在上面放東西。** 否則可能導致事故或造成傷害。

⚠注意

禁止	●**請勿將手或腳伸入本機與小腿•腳部按摩部之間。** ●**請勿將手•手臂或頭伸入小腿•腳部按摩部（腳置台）的縫隙間。** **安全起見，結束按摩後，請一定要收納好小腿•腳部按摩部。** ●**請勿將手、手臂或頭伸入靠背和後蓋之間。** ●**請勿將寵物放在按摩椅上（後蓋、靠背、扶手等）。** ●**按摩中，請勿突然拔出電源播頭、或突然關閉電源開關。** 否則可能造成傷害。
	●**請勿站立或坐在後蓋上。** 否則可能導致本機翻倒，造成人身傷害。
	●**請勿站立或坐在扶手上。** 否則可能導致人身傷害。
	●**請勿站立或坐在小腿•腳部按摩部及腳置臺上。** 否則腳置台前部旋轉或本機傾倒可能導致事故、傷害。 小腿•腳部按摩部底部撞到地板時，可能損壞地板。
	● **請勿在已安裝好的狀態下托動或推動本機。** 否則可能損壞地板。
	● **請勿在有人入座時移動本機。** 否則可能因機身翻倒引發事故或造成傷害。
	● **請勿在電熱毯等加熱設備上使用本機。** 否則可能引起火災。
禁止濕手觸碰	●**請勿在浴室或其他潮濕的地方使用本機。** 否則可能引發觸發或機體故障。
禁止沾濕	●**請勿將水滴等物質撒在本機或遙控器上。** 否則可能引發觸電、短路或引起機體故障。
拔出電源插頭	●**清洗及保養本機，必須先從插座上拔出電源插頭。** 否則可能引發觸電或造成傷害。
	●**停電時立刻拔出電源插頭。** 否則可能在恢復供電時導致事故或造成傷害。
	●**不用時，一定要從插座上拔出電源插頭。** 否則灰塵、濕氣可能導致絕緣老化，進而引發漏電和火災。

警告：

1. 8歲及以上的兒童，身體、感官或精神能力減退人羣，缺乏經驗和按摩知識人羣，在接受有關安全使用本設備的監督或指導，並瞭解相關危險的前提下，可以使用本設備；兒童不得在本設備上玩耍，不得在沒有監督的情況下進行本設備的清潔和維護。
2. 器具有發熱表面，使用時必須注意。

接地說明

- 本機必須接地.如果本機發生功能故障，可以使用接地來減少觸電危險。
- 本機裝備了具有設備接地導線和接地插頭的電源線。必須將該插頭插入已完全依照當地代碼和法令進行正確安裝和接地的、合適的插座。

⚠注意

- **若設備接地導線的連接不當，則會導致觸電危險。如果您對本機的接地是否正確存有疑問，請委託專業電工進行檢查。即使本機附帶的插頭與插座不配，也不能對其進行改造。請委託專業電工安裝合適的插座。**
- **本機具有接地插頭。請確認本機連接至具有與插頭形狀匹配的插座。**
- **本機不能使用轉接插座。**
- **如果電源線損壞，必須使用專用的電源線或從其製造商或維修部買專用元件來更換。**
- **下列症狀的人（包括兒童）：身體殘障人員、精神缺陷人員,禁止使用本機。如果一定要使用本機，必須在專業人員指導下使用。**
- **12歲以下兒童不能使用本機或在本機上玩耍。**
- **該設備具有加熱表面。對熱不敏感的人一定要小心使用設備。**
- **此設備可以讓年齡從8歲以上的兒童, 肢體，感官或心智慧力有缺陷, 或者缺乏經驗知識的人使用, 如果他們被監督，或者有經過有關使用本產品安全的方式和理解其危害性的指導。**

1. 該設備將通過剩餘電流裝置（RCD）供應, 其額定剩餘運行電流不超過30毫安培。
2. 本器具被認為適合在具有熱帶氣候的國家使用。它也可以在其他國家使用。



產品結構

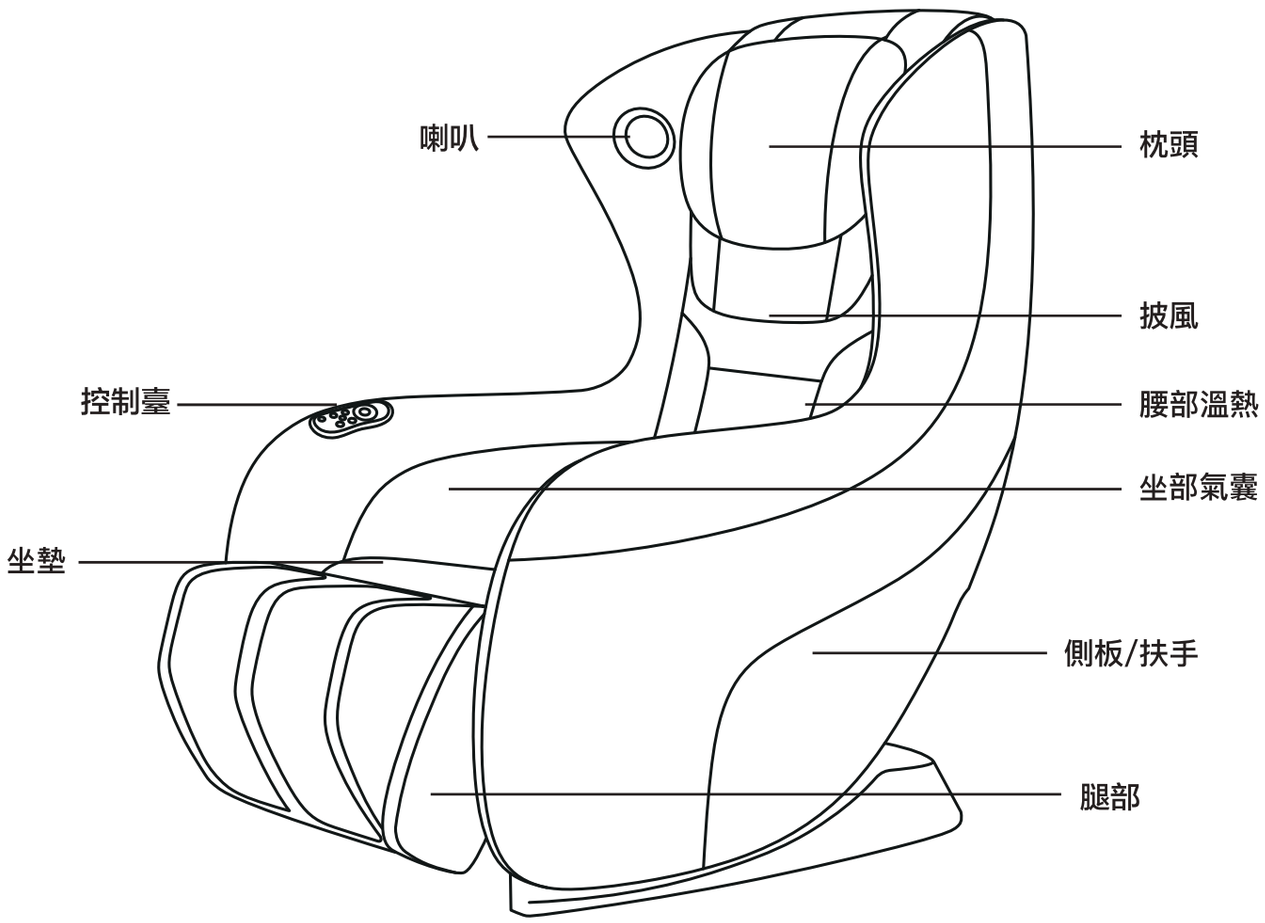

產品結構

氣囊按摩位置

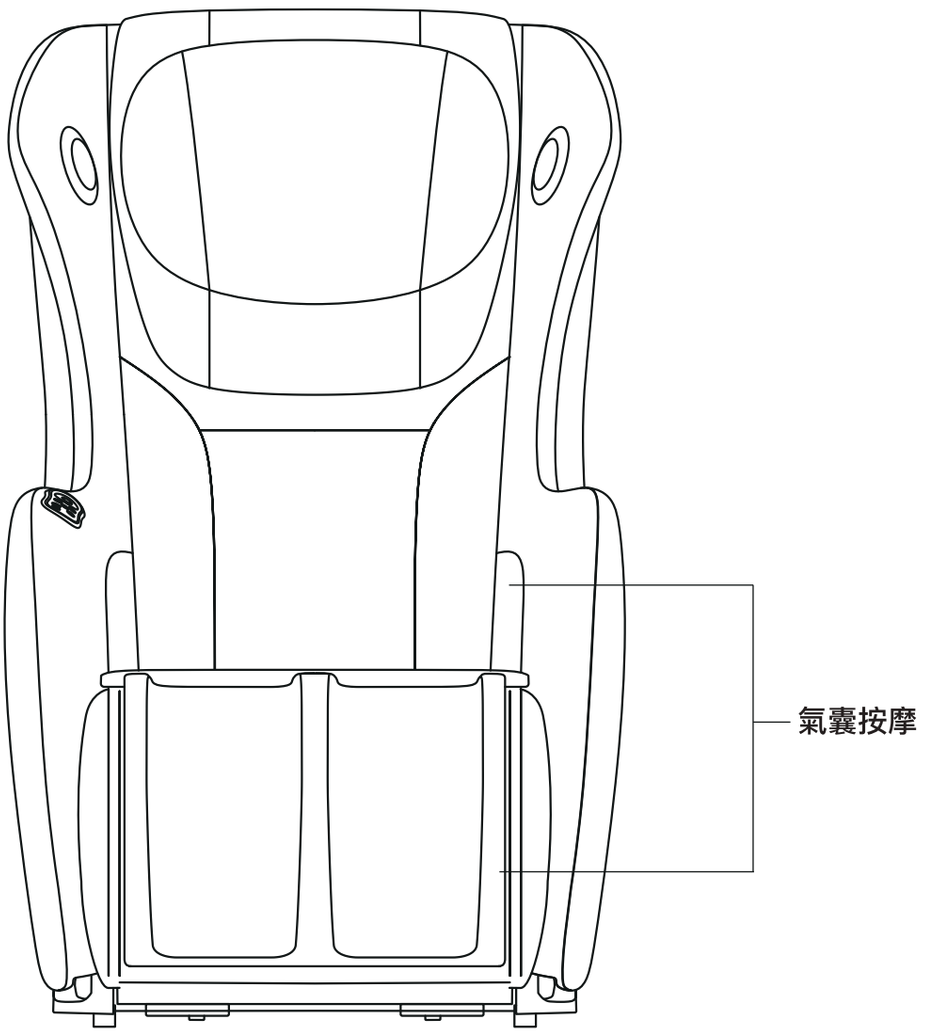

設置按摩椅

1 使用前（安裝位置）

● 確保足夠空間以便按摩椅可以傾斜。

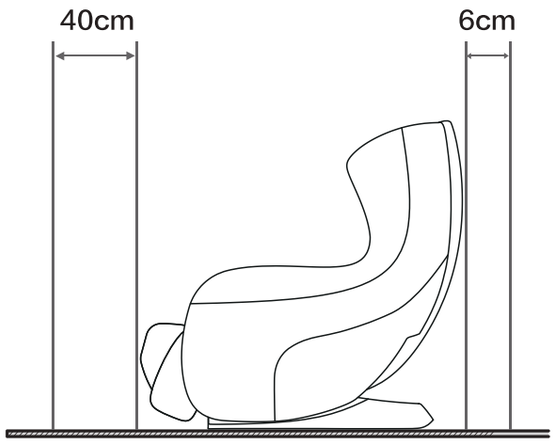

● 請勿將按摩椅暴露於陽光直射或高溫環境下（如加熱設備前），因為這樣可能導致按摩椅合成皮革褪色或硬化。
● 為避免地板損傷，請在本機下鋪上墊子。平鋪墊子時，墊子的大小應足以蓋住本機接觸地板的範圍與腿置台接觸地板的範圍（至少150cm*80cm），如圖所示。
● 安裝本機時應靠近電源插座。

2 產品移動說明

● 翹起按摩椅的前部，手推移動。

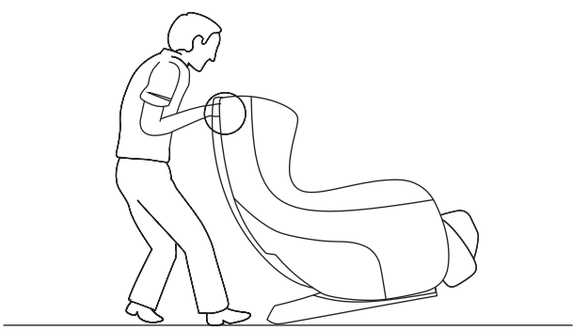

● 由於本機較重，因此搬運時請小心，以免造成背部拉傷。

本機重量	約 51.5kg

將本機放置在地板上

● **緩慢地放下本機，小心腳部被壓傷。**
● **直到機身完全放平前，請勿放開腿置台。突然鬆手，將導致腿置台彈回最初位置。**
● **地板可能受損，因此，建議在地板上鋪上墊子等物料。**

※注意:

● **在移動按摩椅時一定要把腿墊完全收回，若不遵守，在移動過程中腿墊收到原始位置，有可能導致受傷的情況。**
● **當有人坐在按摩椅上時，請不要移動椅子。**
● **移動按摩椅時可能會損壞地板，建議在本產品下鋪上墊子等。**

⚠注意

● **請勿在安裝好的狀態下托動或推動本機。**
● **請勿握住視窗邊框進行本機搬動。**
否則可能會導致機體故障或人身傷害。
● **不要在地板上使用滑輪移動。**
否則可能在地板上留下傷痕。

● **請勿在有人入座時移動本機。**
否則可能因跌倒導致事故、傷害。

● **移動本機時，不要握持腳部按摩部分。**
移動在滑動可能導致傷害。

使用前

1 檢查周圍

確定本機周圍沒有人、
寵物及其他物體。

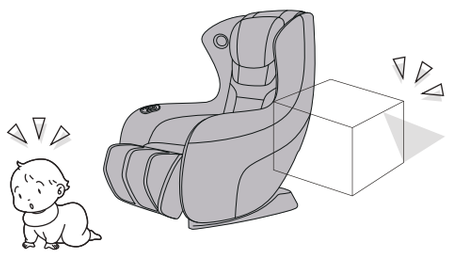

2 卷起靠墊並以拉鍊固定

卷起靠墊並以拉鍊固定在本體上。

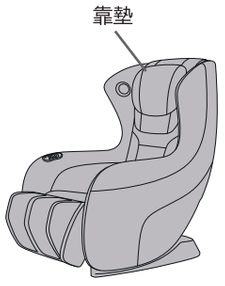

3 確保本機縫隙間沒有異物

小腿.腳部按摩前，確認沒有夾住異物

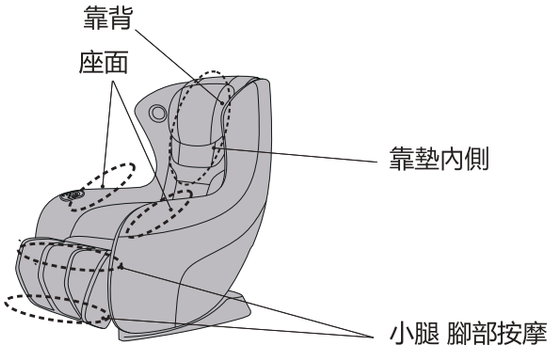

- 不要將手、手指、腳或頭伸進小腿與座面、扶手的間隙中間。
- 就坐前，請先確認本機各個部件之間沒有異物。
- 請勿將寵物放在按摩椅上（後蓋、靠背等）。

4 檢查電源線及電源插頭

⚠ 警告

- **請定期清理電源插頭上的灰塵等髒汙。**
  否則可能因濕氣等原因引發絕緣不良，從而引發火災。
  （請用乾燥的抹布擦試電源插頭。）

- **請勿損壞電源線及電源插頭。**
  （請避免此類行為：損傷、加工、強行彎曲、扭轉、拉長電源線及電源插頭，或將電源線及電源插頭靠近發熱器，或在電源線及電源插頭上系重物、或任意捆綁。）
  使用破損的電源線或電源插頭，可能引起觸電、短路或引發火災。請到購買本機的商店或指定的維修中心諮詢修理電源線或電源插頭的方法。

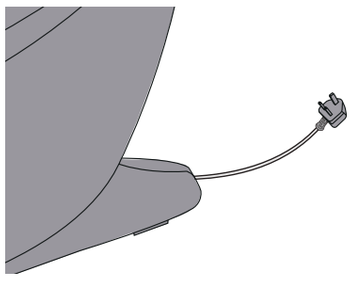

請注意，
不要被電源線絆住腳部等。

務必將接口完全推入設備電源輸入插口。

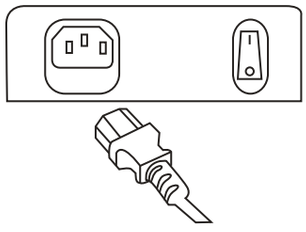

5 打開電源

- **將電源插頭插入電源插座。**
- **將電源開關滑到“I”（開啟）的位置。**

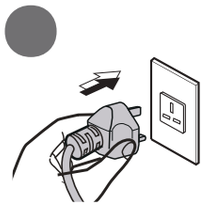

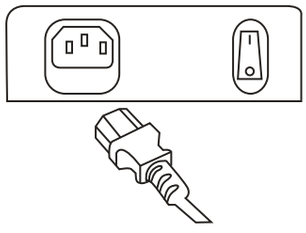

⚠ 警告

- **請務必將電源插頭插到底，使其確實地插入插座中。**
  否則可能引發觸電或因過熱導致火災。

- **請嚴格遵守插座和配線器具的使用規定。**
- **請使用220-240V~50/60Hz交流電。**
  （請勿在國外使用本品、或擅自連接變壓器。）
  否則可能引起觸電、機體故障或因過熱導致火災。

- **請勿用沾濕的手插、拔電源插頭。**

使用前（續）

6 確認按摩輪處於收納位置

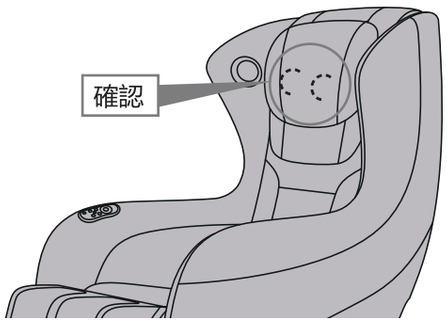

按摩輪不處於收納位置時，

按下開機鍵返回收納位置。

7 確認面料未破損或存在裂縫

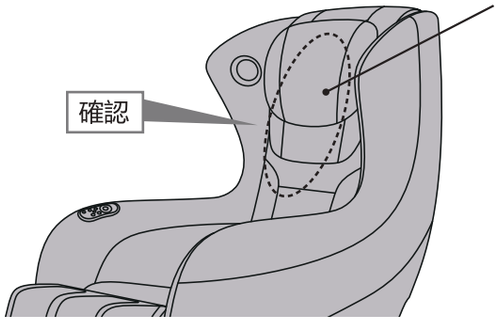

檢查區域：
靠背覆蓋在按摩輪活動範圍上的面料

⚠ 警告

- **在使用本機前，一定要掀開靠墊，以檢查圖示區域面料是否破損，其他部分也要確認面料是否破損。（無論發現多麼細小的破損，都請立刻停止使用，拔掉電源插頭，並將本機送修。）**
  在面料破損情況下使用本機，可能引發傷害或觸電的危險。

操作指南

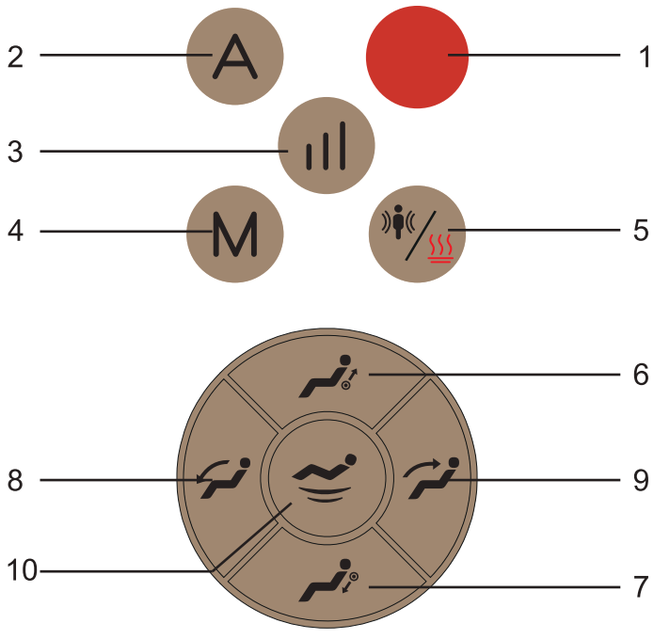

1. 待機

開機控制按鈕 按開/關按鈕打開按摩椅。
再按一次即可停止 所有按摩功能並將按摩椅返回到原始位置。

2. 自動程式

按此按鈕可啟動 6 種不同的程式功能。每次按下按鈕時，程式將按以下順序更改：
Deep Tissue > Relax > Lower Body > Upper Body > Lumbar Care > Shoulder Massage。
每次按自動按鈕 按下後，椅子將自動進行肩高掃描。
用戶可以手動微調滾輪至所需位置。
根据所选的按摩技术，控制器上会亮起红点：

按 1 次	Deep Tissue	● ○ ○
按 2 次	Relax	○ ● ○
按 3 次	Lower Body	○ ○ ●
按 4 次	Upper Body	● ○ ●
按 5 次	Lumbar Care	○ ● ●
按 6 次	Shoulder Massage	● ● ●

3. 按摩速度/強度/氣壓強度

按下此按鈕可增加按摩強度。有 3 个级别的檔按摩強度可供選擇。LV1>LV2>LV3。

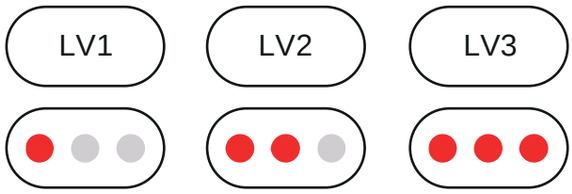

4. 手動按摩

按下此按鈕可啟動手動按摩。順序是揉捏>敲擊> 拍手+揉捏>指壓>拍手>滾動>關閉

5. 氣壓按摩

按下此按鈕可啟動氣壓按摩。再按一次即可關閉。
加熱器 按住 3 秒，啟動腰部加熱器。要關閉，請重複類似的過程。

6/7. 向上/向下

按住此按鈕可移動按摩滾輪。

8/9. 上升/下降

按住此按鈕可移動按摩角度。

10. 零重力

按此按鈕可啟動零重力功能。共有2個零G天使可用 ZG1> ZG2> Origin
搖擺模式 按住 3 秒可啟動擺動功能。要關閉，請重複類似的過程。

USB充電口

打開電源，插上充電綫即可對設備進行充電。

小腿翻轉

通過向下按壓沙發小腿，使小腿進行翻轉直到卡住，可實現小腿按摩功能。再次向下按壓小腿，使小腿進行翻轉直到卡住，可實現沙發、躺椅或腳凳休閒方式。

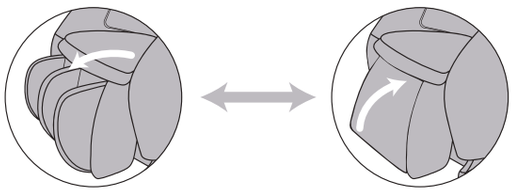

藍牙音樂功能

手機播放音樂：先打開手機藍牙功能，然後選擇按摩椅音箱藍牙設備，（ CMC-OS3161P-XXXX ）。待手機自動匹配好按摩椅音箱，即可實現通過按摩椅音箱播放手機音樂功能。
藍牙首次連接需要輸入PIN碼，密碼是9999

按摩結束

切斷電源

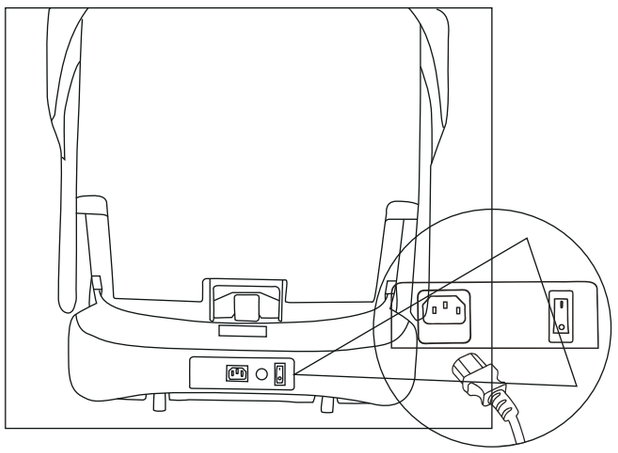

① “關閉” 電源開關

② 拔下電源插頭

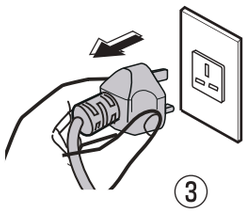

⚠警告

- **每次使用完畢，應將電源開關滑到 “O” （關閉）位置，拔掉電源插頭。**

  否則可能因兒童頑皮引發事故或造成傷害。

按摩開始後啟動定時功能，定時時間到後將自動結束。

- 小腿、腳部按摩部將保持原位。
- 按摩輪將移動到收納位置。
- 靠背不會自動升起。
  如果手控器已關閉，按開關鍵，靠背小腿收回原有位置。

清洗及保養

使用柔軟的幹布擦拭皮革。

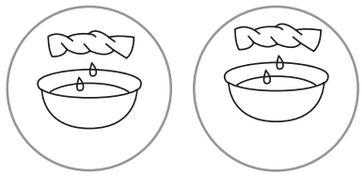

- 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。
- 使用市面銷售的皮革保養品（抹布）時，請遵照其使用說明。
- 如果合成皮革特別髒，則通過以下方式擦拭。
  ①將軟布浸入水中或含3%至5%中性洗滌劑的熱水中，然後徹底擰乾。
  ②使用上述軟布擦拭皮革表面。
  ③使用浸過清水且已徹底擰乾的布料擦掉清潔液。
  ④使用擰乾的軟布擦拭。
  ⑤使其自然風乾。
- 難以去除汙漬時，請將市面上購買的三聚氰胺泡棉浸入中性洗劑中，然後且它擦拭本機。
- 不要使用吹風機吹幹表面。
- 由於布料的顏色會染到合成皮革的表面上，因此在使用牛仔布和彩色布料擦拭本機時務必小心。
- 不要使這些部位長時間與塑膠接觸，因為這會導致褪色。
- 合成皮革有變色的可能，所以在使用染髮劑時，請將接觸的部分用毛巾覆蓋。

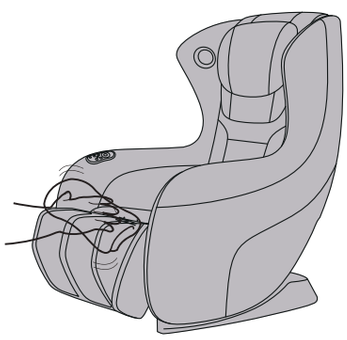



1 將軟布浸入水中或含有中性洗滌劑的熱水中，擰乾後，擦拭本機塑膠部。

- 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。

2 使用浸有清水且已徹底擰乾的布料擦拭。

- 擦拭遙控器前請務必擰乾布料。

3 使其自然風乾。

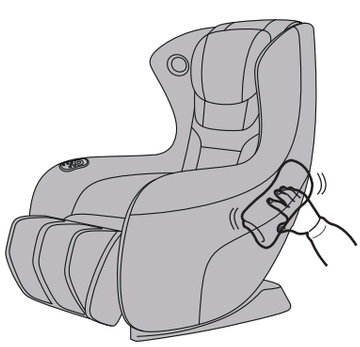



疑問解答（Q&A）

Q 因為生病而經常出入醫院的人可以使用本品嗎？

A 經常出入醫院的人，請在與醫生商量的前提下使用本品。

按摩即所謂“觸壓刺激”，即通過對肌肉進行壓迫，緩解肌肉緊張，促進血液流動。根據不同的病因，按摩有可能造成病情惡化，因此請務必在和主治醫生商量之後使用本品。

Q 搬家時，有什麼需要特別注意的地方？

A 請注意以下事項。

關閉電源開關，拔出電源插頭。

- 在有原紙箱的情況下，請先確認電源線未被纏繞在本機上，將電源線纏好放在座面上，搬運的時間請注意電源線沒有掉落且未與地面發生摩擦。
- 在沒有原裝紙箱的情況下，為了防止機體劃傷和搬運中的震動，請妥善使用其它包裝輔材包裹本品。

Q 請問在哪裡可以看到產品的製造編號？

A 在按摩椅主體背面的座面下。

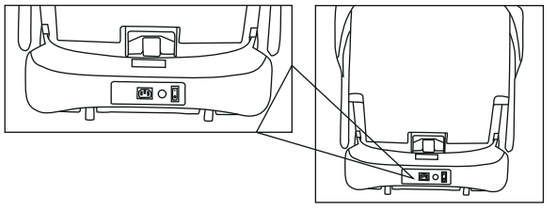

Q 有點在意按摩椅運作時發出的聲音……

A 按摩椅運作時產生的聲音，一般是由於機芯構造而發出的。

Q 按摩中感覺左右兩邊按摩輪的按摩力度有差異，要緊嗎？

A 由於機芯構造，在按摩過程中，有可能感覺左右按摩輪的力度有差異。

為了能夠模擬出最自然的按摩手法，本品機芯採用了左右按摩輪交替捶背的設計。在按摩過程中，左右按摩輪接觸背部的具體位置可能稍有差異，從而導致了使用者產生左右兩側按摩力度有所不同的感覺。此時，本品本身並未發生故障。

Q 使用本品時每個月耗電量是多少？

A 按每日30分鐘，使用頻率來計算，每月本品耗電量約為1.0度。

發生故障後，首先檢查並嘗試以下方法。
如果在嘗試後，故障依然存在，請聯繫銷售店。

問　題	原因和處理方法
	在使用過程中，按摩輪遇到過大的外力時，出於安全考慮，按摩輪可能會停止移動。 如果遙控器上的所有標記和按鈕開始閃爍，這種情況極為異常，請關閉電源開關，等待約10秒鐘，然後再次打開電源。如果按摩輪再次停止，請調整自己的坐姿，不要使背部完全貼在靠背上。（應注意遵守相關注意事項，尤其是體重在100kg或以上的人使用時。）
	如果本機遇到了障礙物或者在使用本機時用力過大，出於安全考慮，本機將停止工作。 當所有顯示的內容及按鈕在閃爍時，且靠背或小腿已停止工作。 關閉本機電源一次，約10秒鐘後再次打“開啟”電源，然後操作本機。
	如果頭部沒有接觸到靠枕，或背部沒有接觸到靠背，在體型檢測過程中肩部位置可能低於實際位置。坐在座椅的最深位置，將頭部靠在靠枕上，然後從頭開始重新操作。
	因為搭載了可進行按摩輪交互捶拍動作的按摩機芯，出現這種情況純屬自然，並非機體故障。
	● 電源線連接已斷開。 ● 沒有打開本機電源開關。 ● 按下遙控器上的開機鍵按鈕後，沒有選擇任何程式。
	為防止事故發生，請務必與授權服務中心聯繫。
沒有溫熱感	● 温感按鈕被設定爲關閉狀態。腿部温感衹有腿部位的布料有温熱感。温度的感知程度根據使用者的體型，按摩手法，衣服，室温而有所不同。腿部按摩部分抬高時，温感傳遞部緊密接觸，使用户感動温暖。 另外，用户可以通過用毛毯蓋住膝蓋，增加温暖感。
及時關閉溫熱功能， 溫度也降不下來	● 由于加熱器的結構，加熱後片刻依然會因爲餘熱而感到温暖。 ● 即使關閉温熱功能，持續按摩同一部位，也會使體感温度上升。

若以上處理方法無效，請聯繫授權服務中心。

在使用中會發生下述的聲音，不過這是因按摩椅的結構而發生的，並非異常。

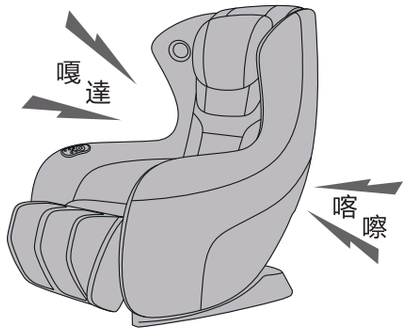

- 按摩輪由“伸出”改為“收回”時的聲音
- 動作時按摩輪擦過面料上的皺紋時發出的　音和感覺
- 揉按、捶拍動作等的動作音
- 按摩輪動作時的摩擦聲
- 上下動作時的動作音
- 傳送帶的轉動音
- 電機音
- 按摩輪從“擠壓”改為“拉伸”時的聲音
- 落座時的聲音
- 靠背傾斜時扶手與靠墊的摩擦聲
- 按摩輪與布料的摩擦聲
- 氣囊按摩運作時的充氣泵工作音
- 氣囊按摩運作時的排氣音
- 氣囊按摩運作時座椅下電磁閥發出的工作音
- 腳置台的晃動
- 肩部伸展、動作時的聲音
- 氣囊的動作音
- 腳部按摩部的滑動音
- 靠背傾斜時，靠墊與後蓋上皮革摩擦時發出的聲音

當聲音變大時，也有可能發生 故障。

- 請委託授權服務中心進行檢查和修理。

⚠警告

- **請勿擅自改造本機。請勿自行分解或修理本機。**
  否則可能導致起火、異常動作、人身傷害。

⚠警告

- **發生異常、故障時，立即停止使用，拔掉電源插頭。**
  （否則可能導致冒煙，起火或觸電危險）
  <異常、故障事例>
  ●接通電源開關後可能不啟動
  ●移動電源線，有時通電有時不通電
  ●運行中發出焦臭味、異常聲響
  ●按摩椅變形或者異常發熱
  →請立即委託授權服務中心檢查和修理。

規格

	AC 220-240V~, 50-60Hz
	100 W
	約93.5cm
	在使用本機過程中按摩輪間的距離（包括按摩輪的寬度） 背部滾動和上下移動過程中按摩輪間的距離（包括按摩輪的寬度）：約 5cm～20cm
	揉按：約26次/分鐘 ～約36次/分鐘 錘拍：約200次/分鐘 ～約260次/分鐘 移動速度：約3.1cm/s ～約4.3cm/s
	靠背：約98° ~120° 小腿按摩部分：約110° ~174°
	約15分鐘（自動斷電）
	120cm*65cm*106cm
	140cm*65cm*84cm
	約51.5kg
	147.5cm*69cm*84cm
	約61.5 kg
	100kg

對于體重100kg或以上的人士，產品運作時可能產生更大的噪聲而且面料外置可能磨損得更快。

聯系我們

CUCKOO International (MAL) Berhad

L16, Menara Bangkok Bank, Laman Sentral Berjaya,
No.105, Jalan Ampang,50450 Kuala Lumpur, Malaysia

Careline : 1-800-88-8181

www.cuckoo.com.my