Air Purifier

USER MANUAL

CAC-K1910FW



CUCKOO International(Mal) Sdn. Bhd.
Registration No: 201401026804(1102894-H)(AJL932230)
www.cuckoo.com.my

CUCKOO International(B) Sdn. Bhd.
CUCKOO International(S) Pte. Ltd.

Dear customers!
Thank you for purchasing CUCKOO Air Purifier.

Please retain this manual (including the Warranty) for future reference.
This manual will be of great help when you have any question or
when the functions do not work properly.



Characteristics and advantages of CUCKOO Air Purifier

Product Benefits

- **Air Purification function**
  Ultra-Deo PM2.5 HEPA Filter installed on the product helps filter out fine dust in the air.

- **Harmful Gas purification**
  A filter that purifies Harmful Gas is installed to remove everyday odors in the air and help maintain clean indoor air.

- **Air Volume Control function**
  You can control the fan speed according to the situation.

- **Auto Operation function by Fine Dust Sensor**
  The Fine Dust Sensor checks the pollution state indoors in real-time and, if Auto Operation is selected, the air volume is automatically adjusted depending on the degree of pollution in the surroundings, thus establishing a pleasant indoor environment.

- **LED Air Quality Indicator**
  The product automatically detects the cleanliness of the indoor air through the Fine Dust Sensor and displays the cleanliness. This function improves the indoor interior.

CONTENTS

Before Use	●	Characteristics and advantages of CUCKOO Air Purifier	2
		Warnings for Safe Use	4 ~ 7
		Name of Parts and Accessories	8 ~ 9
During Use	●	Details to Check Before Use	10
		Name and Functions of Control and Display Panal	11
		Self Diagnostic Mode / Basic Operation of Display Panel	12
		Operation Mode Information	13 ~ 14
		Guide and Other Settings for each Operational State	15
		Cleaning and Maintenance Guide	16 ~ 17
		Replacing Filters	18
Before Asking for Support	●	Please check before asking for Support	19
Service Information	●	Product Specifications and Inquiry about Malfunction	20



Warnings for Safe Use

- Please comply with the 'Warnings for Safe Use' as they are provided to ensure safe and proper use of the device and prevent accidents and dangerous situations.
- The 'Warnings for Safe Use' section is divided into 'Warning' and 'Caution,' which are defined as follows:

⚠ Warning Potentially dangerous situation that can cause serious injuries or death if not avoided.	⚠ • This symbol is to remind you to be cautious about a potentially dangerous situation under special circumstances. • Please read the details carefully and follow the instructions to avoid dangerous situations. • This symbol is used to indicate actions that are prohibited. • This symbol is used to indicate 'instruction' actions.
⚠ Caution Potentially dangerous situation that can cause minor injuries if not avoided.	

About the Power Supply

⚠ Warning *Do not*

Do not bend, tie or pull the Power Cord by force.

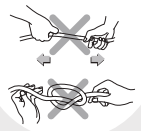

- This may cause electric shock or fire due to a short circuit. Please check the state of the Power Cord frequently.

Plug the power plug into a 220V-240V outlet with at least a rating of 10A and power surge protection. Do not plug in multiple devices into the same power outlet or extension cord simultaneously.

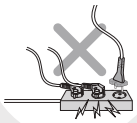

- When multiple devices are plugged into the same power outlet or if the device is plugged into an inappropriate power input, it may cause heating, fire and electric shock.
- If there is a foreign substance or water on the power plug, please wipe it clean before plugging it into the socket.
- Use an extension cord of 10A or higher.

Use 220-240V~ power input only.



- This may cause electric shock or fire.
- The device will not operate properly.
- Please check the state of the power cord and plug frequently.

Wipe off any foreign substance from the Power Plug with a dry cloth.



- If you do not do so, it may cause electric shock or fire due to a short circuit. Frequently check the status of the Power Cord.

Stop using the product if the Power Cord or the Power Plug is damaged or the Power Outlet is unstable on the wall. Please contact our Customer Service Center.



- If the sheath of the Power Cord is peeled off or chopped during use due to negligence, it may cause fire or electric shock. Thus, please check the state of the Power Cord, Power Plug and Power Outlet frequently.
- To prevent dangerous situations arising from the damage of the Power Cord or the Power Plug, please contact the manufacturer, distributor or certified technician (servicemen) for replacement.
- We strongly recommend that the damaged parts be repaired at a designated service center.
- If you do not do so, it may cause electric shock, short circuit, or fire.

When putting in or pulling out the Power Plug, first remove moisture from your hands and then put in or pull out the Power Plug by holding the Power Plug.



- Pulling out the Power Plug with wet hands can cause electric shock.
- Pulling out the power cord by excessive force can damage the Power Cord, causing a short circuit or electric shock. Please check the state of the Power Plug and the Power Cord frequently.

Please unplug the device before cleaning the machine.



- There is a risk of electric shock or malfunction. Please check the state of the Power Plug and the Power Cord frequently.

When unplugging the product, hold the Power Plug, not the Power Cord.



- Applying force to the Power Cord may cause electric shock or fire. Please check the state of the Power Plug and the Power Cord frequently.

About the Power Supply

Warning Do not

Do not put the product or anything heavy on the Power Cord.



• It may cause damage to the Power Cord that could lead to fire, electric shock, or fall of the product.

When moving the product, do not pull the Power Cord.



• It may cause a damage to the product, electric shock, or fire. Please check the state of the Power Cord frequently.

Prevent the Power Plug and the Power Cord from being damaged by an animal or a sharp metallic object such as a nail.



• It may cause a damage to the Power Cord, leading to a short circuit, electric shock, or fire. Check the status of the Power Cord and the Power Plug frequently.

If water enters the power supply area, unplug the product and dry it completely before use.



• It may cause electric shock or fire. Please check the state of the Power Plug and the Power Cord frequently.

Please unplug the product before inspection, repair or replacement of its parts.



• There is a risk of malfunction or electric shock. Please check the state of the Power Plug and the Power Cord frequently.

Do not put in and pull out the Power Plug continuously.



• It may cause electric shock or fire.

Do not randomly connect or process the Power Cord.

• It may cause electric shock or fire.

Installation Guide

Warning Do not

Do not use the product outdoors where the product may get in contact with direct sunlight, rain or snow or places with moisture such as a laundry room or a bathroom.



• It may cause fire or electric shock due to heating and short circuit.

Do not place it in a bumpy or slanted area. Do not place it on a rug, cushion or laminated floor.



• It may cause malfunction, unwanted noise or injury. Please check the state of the product frequently.

Do not keep or use insecticides, combustible gas, inflammables, or toxic substances near the product.



• It may cause fire or a deformation or malfunction of the product.

Do not use the product where smell, smoke, or oil is generated such as a restaurant or a barbecue restaurant.



• It may cause a decrease in the performance.

Do not install the product in a place with excessive oil or smoke for industrial purposes or metallic dust.



• It may cause fire or a malfunction of the product.

Warnings for Safe Use

Installation Guide

Warning **Instruction**

Place the product at least 50cm away on the sides and 60cm away on the top from the wall and surrounding objects.

- Keep these distances for optimal performance.



Please check if there is any obstacle around the product to ensure good air circulation.



Place it at least 2m away from electronic products such as a TV.

- It may cause a radio interference.



Open the windows for ventilation before using gas appliances, combustibles and other inflammables.

- There is a risk of explosion or fire.



Do not use the product to remove toxic gases such as carbon monoxide.

- It may cause a malfunction of the product.

Do not use the product as a ventilating fan or hoods for gas stove or electric ranges in the kitchen.

- It may cause poor performance of the product and filters.

Do not install or use the product near a curtain.

- The Pollution Sensor may not work properly.



Do not use the product for anything other than its intended purpose, e.g. preserving artworks, maintaining precision instruments and animal breeding.

- If you do not do so, it may cause electric shock or fire.

During Use

Warning **Do not**

Do not put any obstruction around the Air Inlet or the Air Outlet of the product.

- It may cause poor performance, abnormal noise, or malfunction of the product.



Do not put your finger or any other foreign substances such as a stick into the Air Inlet or the Air Outlet.

- You may get injured by the fan rotating at a high speed.
- It may cause a malfunction of the product.



If there is abnormal noise, smoke, or smell is emitted from the product, first pull out the Power Plug, and then contact our Customer Service Center.

- It may cause fire, burns, or injury.

Customer Service Center



Do not inject a toxic substance such as smoke of a cigarette into the porous part on the side of the product, or poke with a sharp object.

- It may cause a malfunction of the product, fire or electric shock.

Do not put heat of fire near the product.

- It may cause a malfunction or deformation of the product or fire.

Do not clean the interior of the purifier yourself please contact Customer Service for technical support.

- Otherwise it may cause malfunction of the product or an electric shock.



During Use

Warning Do not

Never soak the product in water.

- There is a risk of electric shock.



Do not sprinkle inflammables such as an insecticide or an air freshener to the Air Inlet.

- It may cause fire or poor performance of the product.



Do not stand on top of the product or put anything heavy.

- It may cause a malfunction of the product or injury due to fall or damages.



Please avoid using it near a heating device.

- It may cause fire or electric shock.



This product should not be used by people including children who lack physical or mental abilities, experience and knowledge to use the product properly without instruction.

- Do not let children play with the product.
- It may cause electric shock or injury.



Do not turn OFF by pulling the plug.

- It may cause an electric shock or malfunction of the product.



Do not move the product while it is working.

- It may cause fire or electric shock or partial damage to the product.



When opening the Filter Cover, please be careful not to let your body or any other foreign material get stuck in the product.

- It may cause an injury or malfunction of the product.



Be careful of any raised spot or obstruction on the floor when moving the product that may cause a scratch or damage to it.

- Although wheels are mounted on the bottom of the product for its mobility, the product has fairly low floor for its design.

After cooking, ventilate sufficiently before operating the product to purify air in the room.

Do not place a bowl with water, drugs, foods, small metallic materials, inflammables, etc. on top of the product.

- If spilled, the products may cause electric shock, fire, or damage.



Do not clean the product by spraying water or wiping out with benzene, thinner, etc.



If it's wet, contact our Customer Service Center.

- There is a risk of malfunction or electric shock.



Wash the Pre-Filter with water on a regular basis and dry it well before use.

- Otherwise it may cause a reduced performance of the product.
- Dry it in the shade.



Please replace the filters in a timely manner.

- It may cause poor performance of the product.



Do not push nor lean on the product. It may fall to the ground.

- It may cause an injury or malfunction of the product.



After cleaning, please make sure to put the parts in their original position.

- Otherwise it may cause malfunction of the product.

Do not lay the product for use.

- It may cause malfunction of the product.

Do not put the product near a window or places where the wind of an air conditioner or a heater can reach.

- It may cause malfunction of the sensors.



When turning off the product, be sure to press the power button to turn product off.

- This may cause product malfunction.

Name of Parts / Accessories

Part names

Front



Back

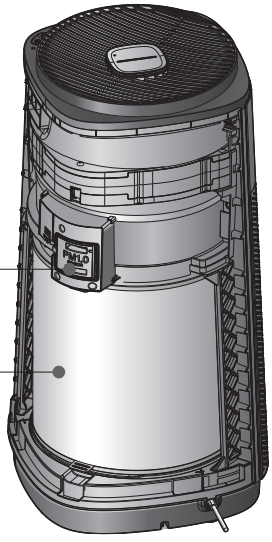

Accessories



User Manual



Service Card



Functional Filter

※The picture may differ from the actual product.

Air Filters

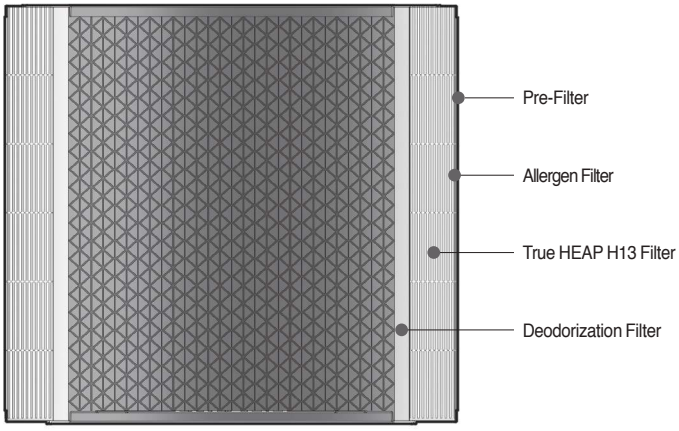

※The picture may differ from the actual product.

Section	Filter
Level 1	Pre-Filter
Level 2	Allergen Filter
Level 3	True HEAP H13 Filter
Level 4	Deodorization Filter

Filter Functions

Pre-Filter		It removes large dust, hair, fur of pets, etc. and extends the replacement cycle of the filters.
Functional Filter	Allergen Filter	It removes alergic substances such as house dust mites and pollens.
Ultra-Deo PM 2.5 HEPA Filter	True HEAP H13 Filter	Excellent at filtering dead bodies of mites, pollens, fine dust and smoke of cigarettes.
	Deodorization Filter	This activated carbon Deodorizing filter, effective in filtering unpleasant odor and harmful gases, is applied to remove smells of food, cigarette, animal fur, NO2 and bathroom.

Details to Check Before Use

Caution

Caution: When you do not use the product for a long time, pull out the Power Plug.This product is exclusively for 220-240V~, 50Hz. Put the Power Plug in the appropriate Power Outlet.

Details to Check Before Use

❶ Open the filter cover.

▶ Please open the filter cover from the left upper part.

※Be careful not to force open by pulling the lower part of the cover.
It may cause damage to the product.

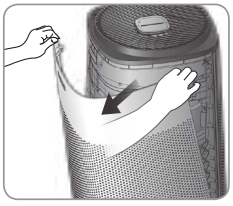

❷ Take out the filter and remove the vinyl wrapping.

▶ After removing the packaging vinyl, Please insert in product.

▶ Please make sure the filter is inserted properly with the upper part on top.

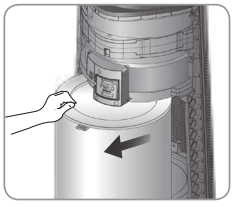

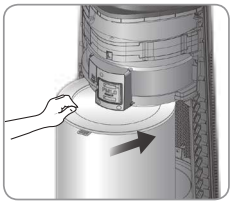

❸ Re-assemble the filter cover on the product.

▶ When re-assembling the filter cover, be careful of jamming a body part or an object. It may cause a bodily injury and/or malfunction of the product.

▶ Push the cover until a hooking sound is heard to lock it.

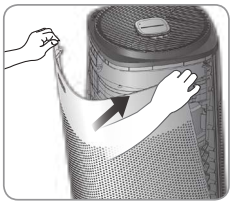

❹ Connect the power supply.

▶ This product is exclusively for 220V-240V~. Please connect the product to the appropriate Power Outlet.

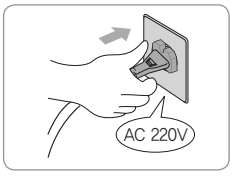

❺ Press the POWER button to turn ON the power and use the Mode button to set the desired operation mode.

※Be sure to operate the filter assembly before operating the product.

❻ Use the POWER button to stop the operation.

▶ If the air cleaning operation was in progress, the fan will run for 10 seconds and stop.

▶ All the indicators on the Display Panel will be turned OFF.

Names and Functions of Control & Display Panel

Control Panel and Display Panel

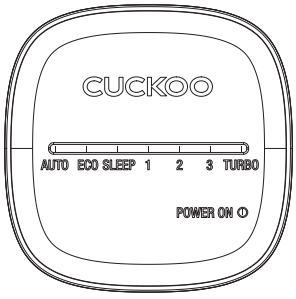

Display Panel



Control Panel

- AUTO – Lit during Auto Air Purification operation
- SLEEP – Lit during Sleep Air Purification operation
- 1 2 3 TURBO – Displays the fan speed
- ECO – Lit during Eco Air Purification operation
- – Used when the product is operated or stopped
- – Used when Air Purifier Operation Mode is selected
- POWER ON – Lit during product operation

Purification Panel DisplayDisplay Panel

- Air Cleanliness Indicator - Displays the level of cleanliness of indoor air in colors
  ※ Levels of cleanliness are displayed in 8 different colors.
  (Polluted) Red → Purple → Orange → Yellow → Light Green → Green → Light Blue → Blue (Clean)

※ Insert the power plug and press the [Power] button to operate the product.
※ Make sure you hear a beep when pressing a button. This Control & Display Panel may look different from the actual appearance.
※ During Air Purification operation, the product's performance may vary according to the air volume.
※ If Sleep operation is selected, the Air Cleanliness Indicator is automatically turned off.
※ If different products are used in the same place, there may be a difference in pollution level values due to the air circulation.



Self Diagnostic Mode / Basic Operation of Display Panel

Self Diagnostic Mode

If the display continues to be shown even under normal usage conditions or after an action taken, please contact our Customer Service Center.

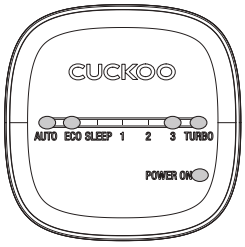

This indicates a malfunction of the filter cover.

Re-install the filter cover.

If the issue is still not settled, please contact our Customer Service Center.

Basic Operation

❶ Insert the power plug.

▶A buzzer sounds and it turns to Standby Mode.

❷ Press the Power button.

▶Display Panel is automatically lit and the fan begins to operate.

※It runs in the previous operating mode.

※If the filter cover is not installed, filter cover non-installation error is displayed in the Display Panel.

❸ Press the Mode button to set it to a desired operation mode.

▶Every time the button is pressed, it changes in the order of “Auto Air Purification – Eco Air Purification – Sleep Air Purification - Manual Gear 1 - Manual Gear 2 - Manual Gear 3 - Turbo Air Purification”.

❹ Press AIR CLEANLINESS button for three seconds to select the cleanliness indicator.

▶Each time when the button is pressed for three seconds, the cleanliness indicator is turned on and off.

❺ To stop the product, press the Power button once again.

▶All lamps of the Display Panel are turned off and it turns to Standby Mode.

Operating Modes

AUTO

Mode that automatically adjusts the air volume according to the surrounding environment



- Press the Power button in the Standby Mode to enter. (It is operated in Auto Air Purification for initial entry and, if there is previous operation history, it is operated in the previous mode.)
- It senses the cleanliness of air and adjusts the fan speed appropriate to it.

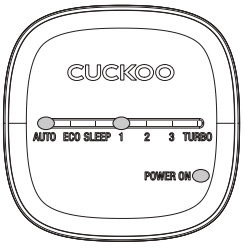

ECO

Mode in which the air is maintained in a clean state and energy is efficiently controlled.

- Press the Mode button once in the Auto Air Purification Mode to enter.
- This mode runs while minimizing energy consumption and controls the fan operation depending on the level of purification and surrounding brightness.
- If the indoor air is maintained in a clean state for a specific period, all LEDs except “ECO”, “POWER ON” are turned off.
- The purification display lamp may be turned on or off depending on the settings.

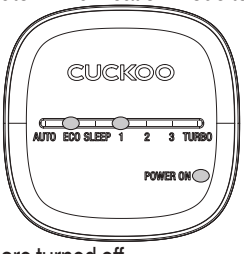

SLEEP

Operation mode minimizing air volume and display



- Press the Mode button twice in the Auto Air Purification Mode to enter.
- For sound sleep, air volume is minimized to run a quiet air purification operation.
- When selecting a mode, the Air Cleanliness Indicator is turned off.

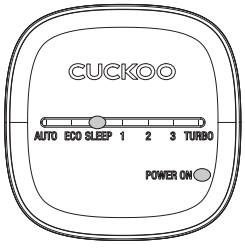

※ This is the Display Panel screen for each operation mode and, during the operation of the product, it may slightly differ from the actual marking.



Operating Modes

Energy Saving

Mode that can save energy by detecting indoor lighting cleanliness

• If the nighttime detection sensor detects darkness during operation, the Air Cleanliness Indicator is turned off.

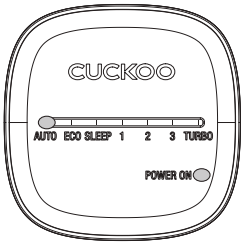

MANUAL

Mode operated by the selected fan speed



• Press the Mode button three times in the Auto Air Purification Mode to enter.
• Press the Mode button to set the fan speed desired by the user (1, 2, 3).

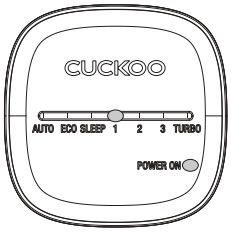

〈Manual Gear "1"〉

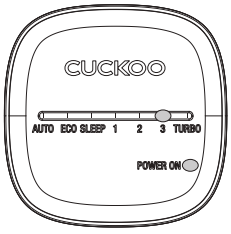

〈Manual Gear "3"〉

TURBO

Mode that quickly removes dust with maximum performance



• Press the Mode button six times in the Auto Air Purification Mode to enter.
• Proceed with high-speed air purification.

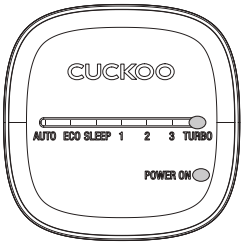

※ This is the Display Panel screen for each operation mode and, during the operation of the product, it may slightly differ from the actual marking.



Guide and Other Settings for each Operational State

Operation Status Information

Air Quality Level Display

Pollution Level	Level 1 (Clean)	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8 (Polluted)
Air cleanliness Indicator	Blue	Sky Blue	Green	Light Green	Yellow	Orange	Purple	Red

Other Settings

Button Sound ON/OFF Setting

This is the method of setting the button sound feature.

❶ Insert the power plug and enter the Standby Mode
(Display Panel lamps are all turned off).
(During the operation of the product, press the Power button to stop.)

❷ Press and hold the Mode button for 3 seconds or more to set the button sound ON/OFF.
(Mute for OFF, melody plays for ON)

Cleaning and Maintenance Guide

How to Clean the Fine Dust Sensor (Clean once every one to two months)

❶ Open the filter cover.
▶ Open the filter cover in the back.

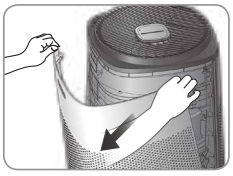

❷ Open the cover of the Fine Dust Sensor.
▶ Clean first with a soft brush.

❸ Carefully wipe Fine Dust Sensor with a swab.
▶ Clean first with a soft brush.
※ If cleaning is not performed regularly, it may cause deterioration of the Fine Dust Sensor performance.

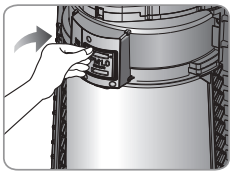

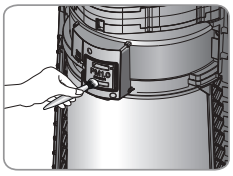

※ Cleaning cycle varies depending on the usage environment so please perform more frequent cleaning in a dusty environment.

※ Do not wipe the sensor with a volatile substance (alcohol, acetone, etc.) other than water.
※ When there is a foreign substance (dust) on the lens of the Fine Dust Sensor, the status of the pollution degree shown on the display may not change from "Polluted". In such cases, clean the sensor thoroughly once again

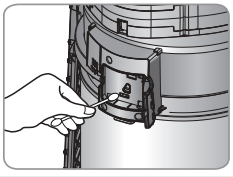

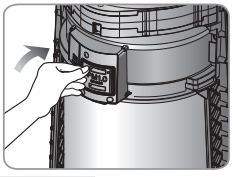

How to Clean the Main Body (Clean once every two to four weeks)

❶ Soak a soft cloth in lukewarm water and then wring it out before wiping the product with it.
❷ Use a swab or cotton flannel to clean the dust in grooves on the exterior.



※ Do not wipe out the Control Panel and the Display Panel with an alkaline detergent.
※ Do not use sulfuric acid, hydrochloric acid or an organic solvent (thinner, kerosene, etc.) to wipe the surfaces of the product or attach stickers on them. The surface can be damaged.

How to Clean the Air Outlet (Clean once every two to four weeks.)

❶ Use a soft brush and a vacuum cleaner to clean the dust in the air outlet.



※ The cleaning cycle varies according to the environment and the time of use, so frequently clean in an environment with much dust.



Cleaning and Maintenance Guide

How to Clean the Pre-Filter (Clean once every two to four weeks.)

- Clean the pre-filter once every two to four weeks.
- Pre-filter may be recycled by removing dust or cleaning by water.
- If the pre-filter is not cleaned for a long period of time, deterioration of the product's performance may occur.
- Functional filter, Deodorization filter and Ultrafine dust collection filter cannot be recycled by cleaning. Please do not clean them in water.
- The filter cleaning cycle may vary according to the surrounding environment.

❶ Open the filter cover in the back.

▶ Pull to open the left and right top parts of the filter cover on the back of the product.

※ Be careful as grabbing and pulling the bottom part of the filter cover on the back of the product with an excessive force may cause damage to the product.

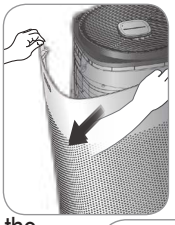

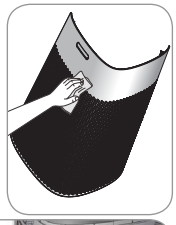

❷ Use a soft, dry cloth or a soft brush to remove the dust stuck on the surfaces of the filter cover.

❸ Take out the Ultra-Deo PM2.5 HEPA Filter from the product and use a vacuum cleaner to remove the dust on the surfaces of the pre-filter.

▶ If not cleaned, some of it may fall onto the floor when you disassemble the Pre-filter.

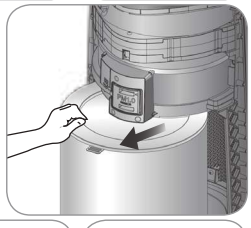

❹ Use a vacuum cleaner to remove the dust on the pre-filter, which is attached to the Ultra-Deo PM2.5 HEPA Filter, or detach the pre-filter and clean it with lukewarm water.

▶ When removing dust with a vacuum cleaner, be careful not to exert an excessive force which may damage the filter.

▶ After cleaning the pre-filter with water, place it in a shaded area to completely dry it.



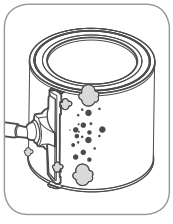

※ Water remaining on the filter may cause a malfunction or odor.

Caution

※ Cleaning with hot water or drying under direct sunlight may cause a deformation of the filter.

❺ Attach the pre-filter on the Ultra-Deo PM2.5 HEPA Filter, install it on the product and re-install the filter cover on the product.

▶ Push the cover until a hooking sound is heard to lock it.

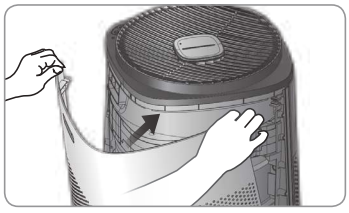

How To Replace the Filters

- If the replacement LED is lit, replace the filter.
- Always unplug the power cord before replacing a filter.
- If the filter cleaning or replacement cycle has been exceeded, it may cause deterioration of the product's performance or odor.
- Please use genuine CUCKOO filters only. Otherwise it may degrade the performance or cause a breakdown. (Please use genuine CUCKOO filters.)
- If the surface of the Air Purification Filter is torn or wet, do not use it but, instead, replace it with a new filter. For filter purchase, contact our Customer Service Center.
- The filter replacement cycle may vary according to the surrounding environment.

Filter Cleaning and Replacement Cycle

Filter		Cleaning / Replacement	Note
Pre-Filter		Once / 2 ~ 4 weeks	Cleaning & Washing
Functional Filter	Allergen Filter	Once / 4 months	Replacement
Ultra-Deo PM2.5 HEPA Filter(True HEPA H13 Filter+Deodorization Filter)		Once / 12 months	Replacement

※ Filter replacement cycle may differ depending on the environment and time of use.
※ The life test of Ultra-Deo PM2.5 True HAPA Filter and Deodorization Filter is done by JEMA1467 (Air purifiers of household and similar use) evaluated the life span by burning tobacco.

How to Replace the Air Purifying Filter

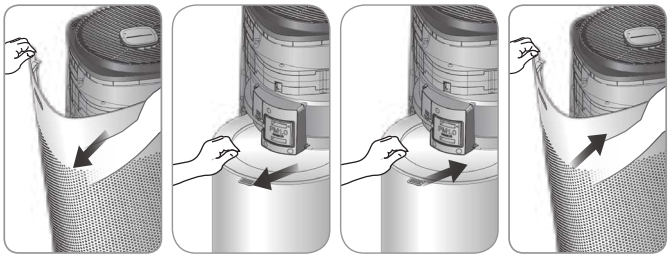

Please check before asking for Support.

▼ If used incorrectly and not in accordance with the manual, the product may not work properly even if it may not be a malfunction. Please take the following measures accordingly if there is a problem with the product. If there a problem persists, please contact our Customer Service Center.

Problem	Checklist	Recommended Actions
The product won't work even if I press the Power button.	• Is the power plug properly and completely inserted into an outlet? • Has there been a power outage? • Is the product properly assembled? • Have you pressed the POWER button?	• Insert the power plug in a power outlet of 220-240V-50Hz. • Use the product after electricity is supplied. • Assemble the product properly. • Press the POWER button.
The air volume won't change.	• Is the product in the MANUAL mode? • Is the product in the SLEEP Mode?	• Change the mode into the operation mode you want. • The minimum air volume is set in SLEEP Mode.
Air purification does not work properly	• Is the level of pollution severe inside? •Is the room overly large? •Is there any obstacle around the product? •Is the product installed where wind cannot move freely? •Has the period for filter cleaning and replacement elapsed?	• Ventilate the room and then use the product. • Use a product that suits the area of use. (Avoid placing the device where it is well ventilated like a door or window.) • Remove all obstacles. • Install the product elsewhere. • Check the filter cleaning and replacement cycle and clean or replace the filters.
There is an odor coming from the air vent.	• Is it an odor that you can smell after purchasing the product? • Is the product used in a place with much smoke and/or odor? • Has the period for filter cleaning and replacement elapsed?	• It is the odor of activated carbon. The odor will disappear one to two weeks after the product starts operation. It is the smell of activated carbon (charcoal) which is harmless to the human body. • The air purification performance may decrease in a place with much smoke or smell. Ventilate the room before using the product. • Check the filter cleaning and replacement cycle and clean or replace the filters.
The color of the air purification status display is always the same.	• Is there dust on the Lens of the Dust Sensor? • Does the dust pollution level continue to be low or high?	• Clean the lens of the Dust Sensor.
When other functional defects occur	• Check the nature of the problem, pull out the power plug and request for service.	

Product Specifications

Category	Air purifier
Model name	CAC-K1910FW
Rated Voltage and Current	220-240V~, 50Hz
Rated Power Consumption	60W
Insulation Rating	Type 2 device
Dust Collecting Method	Mechanical dust collecting method
Safety Device	Power is blocked when the door is being opened or closed
Place for Use	For indoors
Effective Reach Area*	710 sqft / 66 ㎡
Product Size	336(W) X 336(D) X 650(H)
Product Weight	7kg

※ The information (exterior, design, and specifications) provided in this User Manual is subject to change.
※ This appliance is intended for home use (Class B) and is suitable for home use. It can be used in all areas.
※ **Effective Reach Area*** is tested based on KS C 9314:2019 “Air cleaners” Test Method.

Inquiry about Malfunction

Product parts may wear out due to heat, moisture, dust and other causes over time, which in turn may cause malfunction of the product.

In the case that
❶ Something other than the symptoms coming under “Check before reporting a malfunction.” in page 19 occurs;
❷ You can feel electricity when you touch the product with your hands; ❸ The power is supplied, but the Motor does not work
❹ Other malfunctions occur

▼

Please stop using the product.
Please unplug the product and contact our Customer Service Center.

CUCKOO

www.cuckoo.com.my

CUCKOO International (MAL) Sdn. Bhd.

L16, Menara Bangkok Bank, Laman Sentral Berjaya,
No.105, Jalan Ampang, 50450 Kuala Lumpur, Malaysia

Careline : 1-800-88-8181

10383-0022F0 Rev.1